

2020



CT6 Convenience & Personalization Guide


cadillac.com



Review this quick reference guide for an overview of some important features in your Cadillac CT6. Some optional equipment described in this guide (denoted by ♦) may not be included in your vehicle. More information can be found in your Owner's Manual and at my.cadillac.com.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions.

INSTRUMENT PANEL

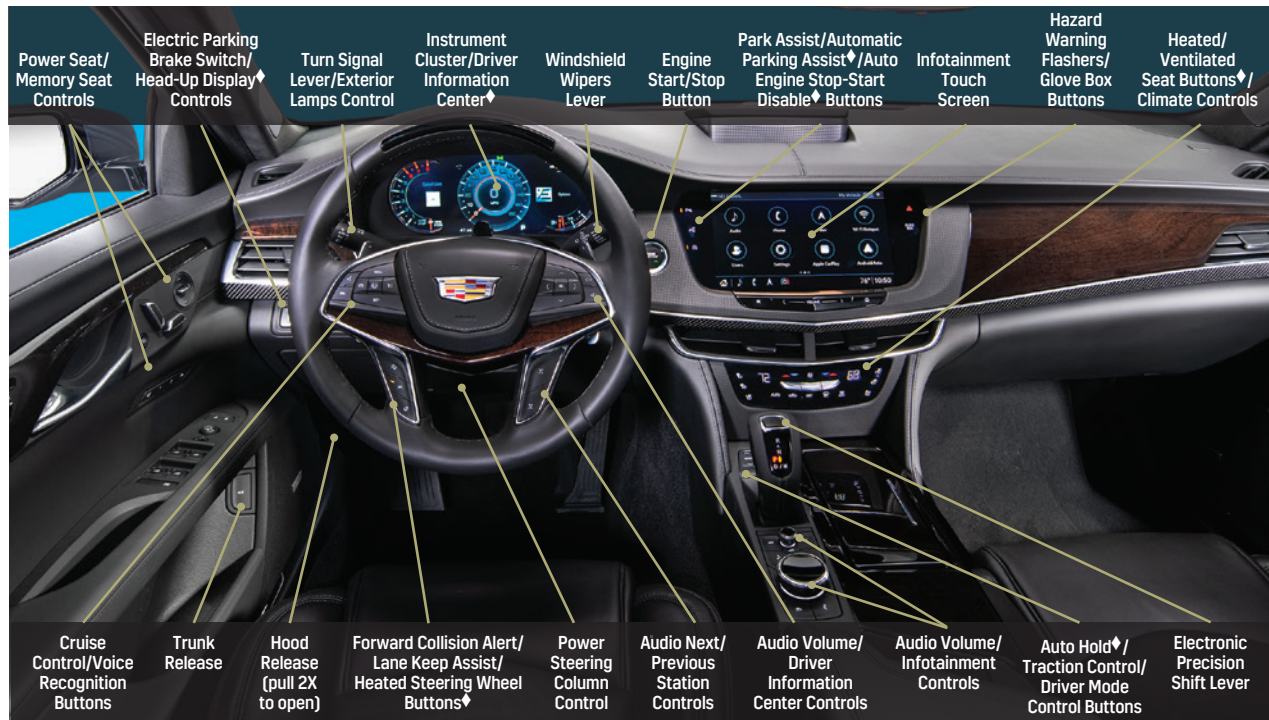

REMOTE KEYLESS ENTRY TRANSMITTER

Lock

Press to lock all doors.

Press and hold for 1 second to fold the power mirrors. To enable operation, go to Settings > Vehicle > Comfort and Convenience.

Unlock

Press to unlock the driver's door only or all doors.

Press and hold for 1 second to unfold the power mirrors.

Press and hold to open all windows.

Remote Start

Press and release the  Lock button and then immediately press and hold  to start the engine.

Vehicle Locator/Panic Alarm

Press and release to locate your vehicle. The exterior lamps flash and the horn chirps 3 times.

Press and hold for 3 seconds to activate the alarm. Press it again to cancel the alarm.

Trunk Release

Press twice to open the trunk. Press once to stop power trunk operation.♦

Door Key

Press the button on the side of the transmitter to pull the door key out of the transmitter. Use the key to lock/unlock the driver's door.

Note: To change or enable some Remote Lock and Unlock settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.

See Keys, Doors and Windows in your Owner's Manual.

♦ Optional equipment



KEYLESS ACCESS SYSTEM

The Keyless Access System enables operation of the doors and trunk without removing the transmitter from your pocket or purse. **The transmitter must be within 3 feet of the door being unlocked or within 3 feet of the trunk.**

KEYLESS UNLOCKING

With the transmitter within range:

- ▶ Press the button on the driver's door handle to unlock the driver's door; press it again within 5 seconds to unlock all doors.
- ▶ Press the button on a passenger door handle to unlock all doors.
- ▶ Press the touch pad above the license plate to open the trunk.



KEYLESS LOCKING

With the ignition off, the transmitter removed from the vehicle, and all doors closed:

- ▶ Press the button on any door handle to lock all doors immediately.
- ▶ If Passive Locking is turned on, all doors will lock automatically after a short delay.

Note: To change the Keyless Locking and Unlocking settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.

See Keys, Doors and Windows in your Owner's Manual.

KEYLESS START

The Remote Keyless Entry (RKE) transmitter must be in the vehicle to turn on the ignition.

START

- ▶ With the vehicle in Park or Neutral, press the brake pedal and then press the **ENGINE START/STOP** button to start the engine. The green indicator on the button will illuminate.



Note: If the RKE transmitter battery is weak, place the transmitter in the pocket in the center console storage area to enable the engine to start. Replace the transmitter battery as soon as possible.

STOP/OFF

- ▶ Shift to Park and press the **ENGINE START/STOP** button to turn off the engine.

Power will be available for 10 minutes to operate the audio system until the driver's door is opened and to operate the windows and sunroof♦ until any door is opened.

ACCESSORY

- ▶ With the engine off and the brake pedal NOT depressed, press the **ENGINE START/STOP** button to place the ignition system in the Accessory mode. The amber indicator on the button will illuminate.

See Driving and Operating in your Owner's Manual.


AUTO ENGINE STOP/START (IF EQUIPPED)

A fuel-saving stop/start system has been integrated with the engine. While driving, when the brake pedal is applied and the vehicle is at a complete stop, the automatic engine stop/start system may turn off the engine, depending on operating conditions. When the engine is off, the tachometer gauge will read AUTO STOP. Upon releasing the brake pedal or applying the accelerator pedal, the engine will restart. After parking the vehicle and turning off the engine, the tachometer gauge will read OFF.

The engine may remain running or restart when the vehicle is stopped if:

- A minimum vehicle speed is not reached.
- The engine or transmission is not at the required operating temperature.
- The outside temperature is not in the required operating range.
- The shift lever is in any gear other than Drive (D).
- The battery charge is low.
- The current settings for the climate control or defog system have not been reached.
- The Auto Stop has reached the maximum allowed time.

AUTO ENGINE STOP/START DISABLE

- ▶ Press the  button left of the infotainment screen when the engine is running to turn off the system. The button indicator is not illuminated when the system is off.

The system automatically turns on each time the vehicle is started.

See Driving and Operating in your Owner's Manual.

ELECTRONIC PRECISION SHIFT

The automatic transmission shift pattern is displayed on top of the shift lever. The selected gear position illuminates in red on the shift lever. The shift lever always starts in the center position and, after shifting, returns to the center position.

Park – Press the button (A) on top of the lever to shift into Park. To shift out of Park, press and hold the shift lock button (B) on the side of the lever while selecting the desired gear.

Reverse – Press and hold the shift lock button (B) and move the lever forward completely (past the detent) to shift into Reverse.

Neutral – Move the lever forward (to the detent) to shift into Neutral.

Note: The transmission will not stay in Neutral for more than 5 minutes. It may automatically shift into Park. See Automated Car Wash Mode.

Drive – Move the lever rearward to shift into Drive. If the vehicle is in Park, press and hold the shift lock button (B) while moving the lever rearward.

Tap Shift Mode – With the transmission in Drive, pull back on the lever to activate Manual Mode. Press the left steering wheel paddle to downshift and the right paddle to upshift. Pull back on the lever again to return to Drive.

AUTOMATED CAR WASH MODE

There are different procedures for placing the transmission in Neutral with the engine on or off and if the driver exits the vehicle. Refer to your Owner's Manual for each procedure.



DRIVER MODE CONTROL

Driver Mode Control automatically adjusts the exhaust, suspension, steering, brakes and powertrain calibrations.

- ▶ Press the **MODE** button on the center console to select the Tour, Sport, Snow/Ice or Track♦ (V-Series only) Mode.



DRIVER MODES

Tour Mode – Use in normal driving for a smooth ride.

Sport Mode – Use where road conditions or personal preference demand a more controlled response.

Snow/Ice Mode – Use during slippery conditions to help control wheel speed.

Track Mode♦ – Use when maximum vehicle handling is desired.

Customization Mode – Allows the engine sound, steering and suspension features to be customized to your preference; go to Settings > Vehicle > Driving Mode.

The mode features vary. Not all vehicles have all features.

Mode Feature	TOUR	SPORT	TRACK	SNOW/ICE
Throttle Progression	Tour	Tour	Track	Snow/Ice
Transmission Shift Mode	Tour	Sport	Track	Tour
Engine Sound	Tour	Sport	Track	Tour
Steering	Tour	Sport	Track	Tour
Suspension (Magnetic Ride Control♦)	Tour	Sport	Track	Tour
Traction and Stability Control	Tour	Tour	Track	Tour

STEERING WHEEL CONTROLS

A. VOICE RECOGNITION

Push to Talk

Press to answer an incoming call or to use voice recognition with the OnStar, Bluetooth or infotainment system.

Press and hold to activate voice pass-thru/Siri® Eyes Free.

End Call/Mute

Press to end/decline a call or mute the audio system.

See your Cadillac User Experience Manual.

B. CRUISE CONTROL/ADAPTIVE CRUISE CONTROL-ADVANCED

On/Off

SET- Set Speed

With Cruise Control on, press the SET- button to set the cruise speed.

RES+ Resume Speed

With Cruise Control on, press the RES+ button to resume the previous set speed.

Adjust Speed


With a cruise speed set, press the RES+ or SET- button to the first detent to increase or decrease the set speed by 1-mph increments; press to the second detent to increase or decrease the set speed to the next 5-mph interval on the speedometer.



Cancel

Press to cancel Cruise Control without erasing the set speed from memory.

Press and hold to switch between regular Cruise Control and Adaptive Cruise Control-Advanced.

When Adaptive Cruise Control-Advanced is active, a green  indicator illuminates and the following gap is displayed.

Following Gap (Adaptive Cruise Control-Advanced/ Forward Collision Alert)

Press to select a gap setting (the time between your vehicle and a detected vehicle) of Far, Medium, or Near.



See Driving and Operating in your Owner's Manual.

C. AUDIO CONTROLS

Volume

Press  or  to increase or decrease the volume.

Next/Previous

Press  or  to go to the next or previous favorite radio station or track.

See your Cadillac User Experience Manual.

D. DRIVER INFORMATION CENTER CONTROLS

Left/Right

Press to view the left or right cluster display.

Up/Down

Press to scroll up or down through a menu.

SEL Select

Press to select a highlighted menu item or to clear a message.

E. HEATED STEERING WHEEL

On/Off

See Instruments and Controls in your Owner's Manual.

F. LANE KEEP ASSIST

On/Off

Press to turn Lane Keep Assist on or off.

See Driving and Operating in your Owner's Manual.

INSTRUMENT CLUSTER



Uplevel cluster shown

CLUSTER DISPLAYS

Use the controls on the right side of the steering wheel to move through the wheel cluster display zones.

- ▶ Press the < or > to move between the display zones. Press the left < to exit a display menu.
- ▶ Press the ^ or v to move through the menus.
- ▶ Press the **SEL (Select)** button to open a menu or select a setting.



RECONFIGURABLE INSTRUMENT CLUSTER◆

The uplevel cluster display layout can be changed.

1. Use the controls to view the Options menu. Press **SEL (Select)**.
2. Scroll to view Display Layout. Press the > to view the layouts.
3. Scroll to highlight the desired layout. Press **SEL**.
4. Press the < to exit the menu.

See Instruments and Controls in your Owner's Manual.

◆ Optional equipment

DRIVER INFORMATION CENTER



Uplevel cluster shown

The Driver Information Center (DIC) on the instrument cluster displays a variety of vehicle information, including Info, Audio, Phone, Navigation, and Options menus. The DIC Info menu features commonly used trip and fuel information, including a digital speedometer, trip displays and fuel range. The items in the Info menu can be selected in the Info Pages menu.

INFO PAGES MENU

1. Use the controls on the right side of the steering wheel to view the Options menu on the cluster. Press **SEL (Select)**.
2. Scroll to view Info Pages. Press the > to view the pages.
3. Scroll to move through the list of possible info pages.
4. Press **SEL** to select or deselect an item.
5. Press the < to exit the menu.

See Instruments and Controls in your Owner's Manual.

HEAD-UP DISPLAY ♦

The Head-Up Display (HUD) projects some operating information on the windshield. Temporary information, such as audio changes and navigation maneuvers, also may be displayed.



The HUD controls are located on the left side of the instrument panel.

HUD

Lift up or press down to adjust the position of the image. It cannot be adjusted side-to-side.

INFO



Press to select from four displays: Speed View; Audio/Phone View; Navigation View; and Performance View.

Brightness

Lift up or press down to brighten or dim the display.

Hold down to turn off the display.

HUD Rotation

- ▶ To adjust the angle of the HUD, use the DIC controls to view Options > Head-Up Display Rotation. Press the  or  control to adjust the angle.

See Instruments and Controls in your Owner's Manual.

EXTERIOR LIGHTING



Rotate the control band to activate the exterior lamps.

Off/On


AUTO Automatic Headlamp System



Automatically activates the Daytime Running Lamps (DRLs) or the headlamps and other exterior lamps depending on outside light conditions.

Parking Lamps

Headlamps

IntelliBeam System

With the lamp control in the AUTO or  Headlamps position, press the button on the end of the lever to turn the automatic high-beam system on or off.

A green  indicator displays on the instrument cluster when the system is on; a blue  indicator displays when the high-beam headlamps are on.

Note: IntelliBeam activates the high-beam headlamps only when driving over 25 mph.

See Lighting in your Owner's Manual.


MEMORY SEATS

SET MEMORY POSITIONS


With the ignition On or in Accessory mode:

1. Adjust the driver's seat, power outside mirrors and power steering column to the desired positions.
2. Press and release the **SET** button on the driver's door. A beep will sound.
3. Immediately press and hold button 1 or 2 until two beeps sound. Use the button that matches the Driver Information Center welcome message indicating driver 1 or 2.



To store driver's seat and power steering column positions for more clearance when exiting the vehicle, repeat these steps using the  **Exit** button instead of button 1 or 2.

RECALL POSITIONS

- ▶ Press and hold button 1, 2 or  **Exit** until the seat, mirrors and power steering column reach the previously set position.

The memory/exit positions can be programmed to be recalled automatically when the ignition is turned On/Off (for exit recall, the driver's door must be opened).

- ▶ To set the automatic recall options, go to Settings > Vehicle > Seating Position > Set Entry Memory and Set Exit Memory.

See Seats and Restraints in your Owner's Manual.

POWER SEATS (PLATINUM MODEL)◆

Seat adjustment controls, a 4-way control pad with a Feature Select toggle control, and a massage button are located on the driver's door, front passenger's door and the rear seat armrest. Adjustment features are displayed on the front and rear infotainment screens.

FEATURE AND MESSAGE SELECTION

- ▶ With the ignition On, toggle the Feature Select control to display seat adjustment features and massage options.
- ▶ Use the 4-way control pad to make adjustments up, down, forward, or rearward to the selected feature or to select the massage type and intensity.
- ▶ Press the massage button to recall the last massage type and intensity.



See Seats and Restraints in your Owner's Manual.

AUTO HEATED SEATS/STEERING WHEEL◆ AND VENTILATED SEATS◆

When the vehicle is on, the automatic heated seats and automatic heated steering wheel or automatic ventilated seats will be activated at the level required by the vehicle's interior temperature. Turn off the heated or ventilated seats using the seat controls. Turn off the heated steering wheel using the steering wheel control.

- ▶ To turn the auto heated seats/steering wheel or auto ventilated seats feature on or off, go to Settings > Vehicle > Climate and Air Quality > Auto Heated Seats and Auto Cooled Seats.

See Instruments and Controls in your Owner's Manual.

CADILLAC USER EXPERIENCE CONTROLS

Refer to your Owner's Manual for important information about using the infotainment system while driving.

Your CT6 offers a variety of entertainment, communication and vehicle system options. Touch an application icon on the touch screen or use the rotary infotainment controller and buttons to access an item. You can use simple gestures on the touch screen, such as tap, drag, pinch and spread, to interact with the infotainment system. Link a compatible smartphone, USB flash drive or portable audio player/iPod® to the infotainment system using a Bluetooth or USB connection. For assistance, call 1-855-428-3669 or visit my.cadillac.com/learn.

Applications Tray:
Shortcuts to applications

Applications:
Touch an icon to access an application

Additional Pages:
Swipe to view additional pages of applications (if available)

Press to seek the previous or next radio station or track

Press and hold to turn on-off/
Press to mute-unmute/Rotate to adjust the volume

Navigation menu



Power/Mute:
Press and hold to turn on/off; press to mute/unmute audio

VOLUME
Touch arrows or swipe to adjust the volume

Home Page



Audio menu

Controller:
Rotate to highlight a feature on the screen/Press to select a feature

Return to previous menu

Phone menu

See your Cadillac User Experience Manual.

CADILLAC USER EXPERIENCE FEATURES

STORING STATION PRESETS

Radio stations from all bands (AM, FM or SiriusXM[◆]) can be stored in any order.

1. Display the desired radio station.
2. Touch and hold a preset button at the top of the screen. Favorites also can be saved by touching the ★ in a station or channel list.
3. Repeat the steps to store another favorite station.



PORTABLE AUDIO DEVICES

USB-A and USB-C ports for data and charging, and a SD card, are located in the center console storage compartment.

- ▶ Connect an iPod®, iPhone®, MP3 player, a USB flash drive or a USB mass storage device to a USB port.
- ▶ Touch Audio, and then touch More and select the USB device. Search for music on-screen or by voice commands.



2 charge-only USB ports are located on the front of the rear seat cushion for the convenience of rear seat passengers.

APPS[◆]

Connected apps linking to music, news, weather, travel information, sports, entertainment and more are available for download to the infotainment system through the Apps icon on the Home page. Downloading and using the apps requires internet connectivity, and may require a data plan, accessed through the vehicle's 4G LTE Wi-Fi hotspot, if active, or a mobile device hotspot. For more information, visit my.cadillac.com/learn.

APPLE CARPLAY

Apple CarPlay capability is available through a compatible smartphone using the Apple CarPlay icon on the Home page of the infotainment system. No app is required.

1. Connect your compatible phone by plugging the Lightning cable into a USB data port. Use your device's factory-provided Lightning cable. Aftermarket cables may not work.
2. The Apple CarPlay icon will illuminate. Touch the Apple CarPlay icon to have your apps displayed.

ANDROID AUTO


Android Auto capability is available through a compatible smartphone using the Android Auto icon on the Home page of the infotainment system.

1. Download the Android Auto app to your phone from the Google Play Store.
2. Connect your compatible phone by plugging the phone USB cable into a USB data port. Use your device's factory-provided USB cable. Aftermarket cables may not work.
3. The Android Auto icon will illuminate. Touch the Android Auto icon to have your apps displayed.

CADILLAC USER EXPERIENCE FEATURES

VOICE RECOGNITION

Control the music source and navigation destination♦, and make phone calls hands-free, using the natural voice recognition system.

1. Press the  **Push to Talk** button on the steering wheel.
2. The system will play a prompt.
3. After the prompt, say what you want it to do.
 - Example hands-free calling command: "Call Dave" or "Dial 555-1212"
 - Example connected music device search command: "Play artist [name]" or "Play song [name]"
 - Example radio control command: "Tune to 99.5 FM"
 - Help: Say "Help" for voice recognition assistance.

BLUETOOTH VOICE RECOGNITION

Bluetooth Voice Recognition allows access to the voice recognition commands on a compatible, paired cell phone; e.g. Siri® Eyes free or Voice Command.

- ▶ To activate Bluetooth Voice Recognition, press and hold the  **Push to Talk** steering wheel button.

VALET MODE

- ▶ To lock/unlock the infotainment screen and the glove box, select Settings > Vehicle > Valet Mode and enter a passcode. It can be used when it's desired that only an authorized user has access to personalized features.

 
See your Cadillac User Experience Manual.

BLUETOOTH® SYSTEM

Refer to your Owner's Manual for important information about using the Bluetooth system while driving.

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. Not all devices will support all functions. The pairing process is disabled when the vehicle is moving. For more information, visit my.cadillac.com/learn.

PAIR A PHONE USING VOICE/INFOTAINMENT SCREEN

1. To use voice recognition, press the  **Push to Talk** button; after the tone, say "Pair Phone." To use the infotainment screen, select the Phone icon > Connect Phone > Add Phone.
2. Start the pairing process on the phone. From your phone's Bluetooth settings, select the name shown on the infotainment screen.
3. Follow the pairing instructions.
4. When pairing is complete, the phone screen is displayed. Your phone book may be downloaded depending on the phone.

SECONDARY PHONE

A secondary phone can be paired to the Bluetooth system. The system connects to the phone that is set to First to Connect. The secondary phone can only receive calls.

- ▶ To set the first and secondary phones, go to Settings > System > Phones and select the Information icon next to the phone name.

See your Cadillac User Experience Manual.

WIRELESS CHARGING

The wireless charging system for smartphones is located under the center console armrest. To check smartphone compatibility, visit my.cadillac.com/learn. See your phone retailer for required phone accessories or charging adapters.

1. The vehicle must be On or Retained Accessory Power must be active.
2. Remove all objects from the charging pad.
3. Place the smartphone face up on the symbol on the pad and aligned with the left wall of the bin.



4. A green ⚡ symbol will display next to the Phone icon on the infotainment screen when charging. If the symbol is yellow, check the charging pad for any objects and reposition the phone if needed.

See Instruments and Controls in your Owner's Manual.

4G LTE WI-FI® HOTSPOT

With the vehicle's available built-in 4G LTE Wi-Fi hotspot, up to 7 devices (smartphones, tablets and laptops) can be connected to high-speed internet.

- ▶ To retrieve the SSID and password for the hotspot, select the Wi-Fi Hotspot icon on the infotainment screen or go to Settings > System > Wi-Fi Hotspot.



Note: For more information on use and system limitations, visit my.cadillac.com/learn.

See your Cadillac User Experience Manual.

◆ Optional equipment

NAVIGATION

Enter a destination using the Single Line Destination feature. Approximate your destination and the system's auto-fill function will enter the necessary information.

1. Touch Navigation on the Home page.
 2. From the map view, select the  Search icon and enter the address or other information in the search bar.
 3. Select the desired name from the generated list.
 4. Touch Go.
- ▶ Touch  while in map view to access the display options.



See your Cadillac User Experience Manual.

OVER-THE-AIR SOFTWARE UPDATES

The infotainment system can download and install vehicle software updates through the vehicle's 4G LTE Wi-Fi hotspot, if active, or a secured Wi-Fi hotspot. The system will prompt high priority updates to be downloaded and installed.

- ▶ To check updates manually, go to Settings > System > Updates. Follow the on-screen prompts.

Visit my.cadillac.com/learn for more information.

See your Cadillac User Experience Manual.

VEHICLE CUSTOMIZATION

Many vehicle features can be customized using Settings menus on the infotainment system. The Settings menus may include System, Apps, and Vehicle.



1. Touch **Settings** on the Home page.
2. Select the desired menu item.
3. Select the desired feature and setting.
4. Touch **<Back** to exit each menu or touch **X** to go to the top level of the Settings menu.

See Instruments and Controls in your Owner's Manual.

TEEN DRIVER

Teen Driver allows multiple keys to be registered for beginning drivers. When active, the system automatically activates certain safety systems, allows setting of some features, and limits the use of others. An in-vehicle Report Card records vehicle data about driving behavior. When the vehicle is started with a registered key, the Driver Information Center displays that Teen Driver is active.

- ▶ To create a Personal Identification Number, register a key, change Teen Driver settings, or access the Report Card, go to Settings > Vehicle > Teen Driver.

See your Cadillac User Experience Manual.

WINDSHIELD WIPERS



HI Fast Wipes

LO Slow Wipes

AUTO Rainsense™ Sensitivity

Rotate the band to adjust the moisture sensitivity (with Rainsense enabled) or to adjust the delay between wipes (with Rainsense disabled). To enable the Rainsense feature, go to Settings > Comfort and Convenience > Rainsense Wipers.

Note: When entering an automatic car wash, move the wiper lever to the Off position.

OFF

1x Single Wipe



Washer Fluid

Pull the lever toward you to spray washer fluid on the windshield and activate the wipers.



Rear Camera Mirror Washer♦


Push the lever away from you to spray washer fluid on the rear camera mirror lens.

See Instruments and Controls in your Owner's Manual.

CLIMATE CONTROLS

FRONT CLIMATE CONTROLS

The climate control settings can be adjusted using the climate control buttons or the infotainment screen.

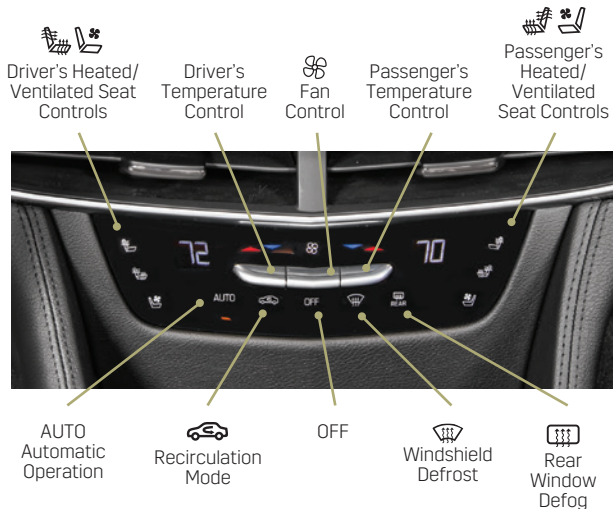

AUTOMATIC OPERATION

- ▶ Press **AUTO**. The system automatically controls the fan speed, air delivery, air conditioning and recirculation to reach the set temperature. If a function is manually adjusted, the auto indicator turns off and automatic operation for that function is disabled.

SYNC TEMPERATURE SETTINGS

- ▶ Touch the Climate icon, and then **SYNC**, on the infotainment screen to link all climate zone settings to the driver's settings.

REAR CLIMATE CONTROLS♦

The rear climate control settings can be adjusted using the rear climate control buttons on the rear of the center console or the infotainment screen.

- ▶ Touch the **Rear Climate Controls** icon on the infotainment screen and then touch Controls Lockout to lock/unlock the rear seat controls.



DRIVER ASSISTANCE SYSTEMS

Safety or driver assistance features are no substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Read your Owner's Manual for important feature limitations and information.



SAFETY ALERT SEAT – The driver's seat pulses (left, right, or both sides) to alert you of the direction of potential hazards.


- ▶ Audible alerts may be selected instead of seat pulsing alerts. To change the alert settings, go to Settings > Vehicle > Collision/Detection Systems > Alert Type.

LANE CHANGE ALERT WITH SIDE BLIND ZONE ALERT – While driving, the system displays a  symbol on the left or right side mirror when a vehicle is detected in that side blind zone area or rapidly approaching that area. The symbol flashes if a turn signal is activated when a vehicle has been detected on the same side.

- ▶ To turn the system on or off, go to Settings > Vehicle > Collision/Detection Systems > Lane Change Alert.

LANE KEEP ASSIST WITH LANE DEPARTURE WARNING –

The system may help you avoid collisions due to unintentional lane departures. The  Lane Keep Assist Indicator is green if the system is available to assist. If the vehicle approaches a detected lane marking without using a turn signal in that direction, the system may assist by gently turning the steering wheel and displaying an amber .


If active driver steering is not detected, the amber  may flash and the Safety Alert Seat may pulse or beeps may sound (if selected) on the side of the departure direction as the lane marking is crossed. The Lane Keep Assist system does not continuously steer the vehicle; the driver needs to steer and be in complete control of the vehicle.


- ▶ Press the  **Lane Keep Assist** button on the steering wheel to turn the system on or off.

FORWARD COLLISION ALERT – The  Vehicle Ahead Indicator is green when a vehicle is detected and is amber when following a vehicle ahead much too closely. When approaching a vehicle directly ahead too rapidly, a red alert flashes on the windshield and the Safety Alert Seat pulses or rapid beeps sound (if selected).

- ▶ Press the  **Collision Alert** button on the steering wheel to set the alert timing to Far, Medium or Near. This is also the Adaptive Cruise Control–Advanced  Following Gap setting.

ENHANCED AUTOMATIC EMERGENCY BRAKING/REVERSE AUTOMATIC BRAKING  – In detected potential imminent collision situations with vehicles directly ahead or behind, and with some objects behind your vehicle, the system can provide alerts and enhance driver braking or apply the brakes, if you have not already done so, to help reduce the severity or help avoid collisions at very low speeds.

- ▶ To set Enhanced Automatic Emergency Braking and Forward Collision Alert to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Forward Collision System.
- ▶ Press the  **Park Assist** button on the center of the instrument panel to turn Reverse Automatic Braking and Park Assist on or off.

FRONT PEDESTRIAN BRAKING – During daytime driving, the system detects pedestrians directly ahead up to a distance of approximately 131 ft. and displays an amber  indicator. When approaching a detected pedestrian too quickly, a red alert flashes on the windshield and the Safety Alert Seat pulses or rapid beeps sound (if selected). The system may prepare the brakes or automatically brake the vehicle, if you have not already done so.

- ▶ To set to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Front Pedestrian Detection.

DRIVER ASSISTANCE SYSTEMS

REAR PEDESTRIAN ALERT ♦ – During daytime driving with the vehicle in Reverse, the system detects pedestrians up to 26 feet behind the vehicle. When a pedestrian is detected close to the vehicle, a red alert flashes on the infotainment screen and the Safety Alert Seat pulses or rapid beeps sound (if selected).

- ▶ To set to Alert or Off, go to Settings > Vehicle > Collision/ Detection Systems > Rear Pedestrian Detection.

NIGHT VISION ♦ – A thermal heat image of the view ahead displays on the instrument cluster when it is dark outside and the headlamps are on. An amber indicator displays when a pedestrian or animal is detected; and a red alert displays on the HUD and the Safety Alert Seat pulses or beeps sound (if selected) when approaching a pedestrian too quickly.

- ▶ To view the Night Vision image, use the Driver Information Center controls on the steering wheel to scroll through the center display zone until the image is shown.

FOLLOWING DISTANCE INDICATOR ♦ – The following distance to the vehicle ahead is indicated in seconds under the Info menu on the Driver Information Center. If no vehicle is detected ahead, dashes are displayed.

FRONT ♦ AND REAR PARK ASSIST – During low-speed parking maneuvers, the system provides “distance to closest object” information on the Driver Information Center and the Safety Alert Seat pulses or a beep sounds (if selected). When an object is very close, the Safety Alert Seat pulses or 5 beeps sound (if selected).

- ▶ Press the **P** **Park Assist** button on the center of the instrument panel to turn the system on or off.

REAR CROSS TRAFFIC ALERT – When in Reverse, the system warns of cross traffic approaching in either direction by displaying a red alert on the infotainment screen and the left or right side of the Safety Alert Seat pulses or beeps sound (if selected).

- ▶ To turn the system on or off, go to Settings > Vehicle > Collision/ Detection Systems > Rear Cross Traffic Alert.



HD REAR VISION CAMERA – When the vehicle is in Reverse below 8 mph, a view of the area behind the vehicle displays on the infotainment screen.

HD SURROUND VISION ♦ – The Surround Vision system displays the area surrounding the vehicle along with rear or front camera views on the infotainment screen. The system operates when the vehicle is in Reverse or Drive while moving less than 8 mph. Camera view buttons are at the bottom of the screen.

SURROUND VISION RECORDER ♦ – The 360° camera views can be recorded to an SD card (not provided) in the card reader located in the trunk.

- ▶ To activate or deactivate recording, touch Video Recorder on the infotainment screen and then touch the red dot.


Once activated, the system will record until it has been turned off. The recorded video can be played when the vehicle is in Park.

AUTOMATIC SAFETY BELT TIGHTENING – The front safety belts automatically tighten during emergency braking or steering maneuvers, and release when driving conditions return to normal.

See Driving and Operating in your Owner's Manual.

DRIVER ASSISTANCE SYSTEMS

AUTOMATIC PARKING ASSIST WITH BRAKING – The Automatic Parking Assist with Braking system steers, brakes, and moves the vehicle at idle speed to help you park the vehicle while you follow commands and control the gear selection. When using this system, the driver should always be prepared during the parking maneuver to override braking and acceleration since the system may not detect objects or persons.

1. While in Drive, press the **P**  **Automatic Parking Assist** button (A) on the center of the instrument panel. A beep sounds and a parking assist display is shown on the infotainment screen. The system will begin searching for a large enough parking space.
2. To switch between parallel and perpendicular parking, touch the Parking Type screen button. To search for a parking space to the right or left, touch the Parking Side screen button.
3. Once a space is found, shift the vehicle into Reverse or Drive as directed and follow the instructions on the infotainment screen. The vehicle automatically steers and brakes, moving at idle speed into a detected parking space. The driver must follow the instructions, select gears, and override braking and acceleration as needed. Parking Complete will be displayed and a beep will sound when the parking maneuver is complete.



See Driving and Operating in your Owner's Manual.

TRACTION CONTROL AND STABILITRAK® SYSTEMS

The traction control system limits wheelspin and the StabiliTrak stability control system assists with directional control of the vehicle in difficult driving conditions. Both systems turn on automatically every time the vehicle is started. Turn off traction control if the vehicle is stuck, and rocking the vehicle is required.

- ▶ Press the **OFF** **Traction Control/StabiliTrak OFF** button on the center console. The **Traction Control Off** light will illuminate on the instrument cluster. Press the button again to turn on traction control.

See Driving and Operating in your Owner's Manual.

POWER TRUNK

HANDS-FREE OPERATION

To open or close the trunk hands-free, kick your foot straight in and out under the right-center of the rear bumper, indicated by the vehicle logo projected on the ground. The Remote Keyless Entry (RKE) transmitter must be within 3 feet of the trunk.



Note: To change the power trunk settings, go to Settings > Vehicle > Comfort and Convenience > Hands-Free Trunk Control.

See Keys, Doors and Windows in your Owner's Manual.

AUTOMATIC VEHICLE HOLD

Automatic Vehicle Hold will hold the vehicle stationary after the brake pedal has been released and until the accelerator pedal is pressed. The indicator illuminates in green on the instrument cluster when the system is holding the vehicle.

- ▶ To turn the system on or off, press the **AUTO HOLD** button on the center console with the driver's seat belt fastened, the driver's door closed and the engine on.

See Driving and Operating in your Owner's Manual.

REAR CAMERA MIRROR

The rear camera mirror provides a wider, less obstructed field of view to assist when driving, changing lanes and checking traffic conditions.



A. On/Off

Pull or push the lever at the bottom of the mirror to turn the video display on or off.

B. ✓

Press and release the button to select the brightness, tilt, or zoom feature.

C. ◀▶

Press and release either button to adjust the selected feature.


See Keys, Doors and Windows in your Owner's Manual.

◆ Optional equipment

ULTRAVIEW SUNROOF

OPEN/CLOSE THE SUNSHADES

- A. Press the **FR Front Sunshade** switch on the overhead console to open or close the front sunshade.
- B. Press the **RR Rear Sunshade** switch on the overhead console or rear doors to open or close the rear sunshade.
- C. Press the **RW Rear Window Sunshade** switch on the overhead console or rear doors to open or close the rear window sunshade.

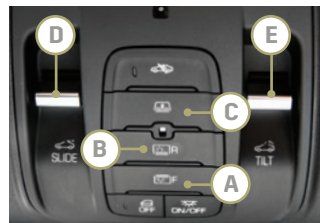

OPEN/CLOSE THE SUNROOF

- D. Fully pull the **SLIDE** switch to express-open the sunroof. Fully press the switch to express-close the sunroof.
- E. Pull the **TILT** switch to vent the sunroof. Press the switch to close the sunroof.

See Keys, Doors and Windows in your Owner's Manual.

TIRE PRESSURE MONITOR

The **Low Tire Pressure** light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated. Fill the tires to the proper tire pressures listed on the Tire and Loading Information label, located below the driver's door latch. Current tire pressures can be viewed on the Driver Information Center. The Tire Fill Alert also provides visual and audible alerts to help when inflating a tire to the recommended tire pressure.

See Vehicle Care in your Owner's Manual.

OWNER PRIVILEGES™

ROADSIDE ASSISTANCE

1-800-224-1400

TTY Users: 1-888-889-2438

Roadside Assistance provides every Cadillac owner with the advantage of contacting a Cadillac advisor and, when appropriate, a Cadillac-trained dealer technician who can provide on-site services, including towing service, battery jump-starting, lock-out service, fuel delivery and flat tire assistance. Services are provided for up to 6 years/70,000 miles, whichever occurs first.

OnStar® Roadside Assistance

If you have a current OnStar Safety & Security plan, push the blue OnStar button or red Emergency button to get the help you need. An OnStar advisor will use GPS technology to pinpoint your vehicle location and contact the nearest service provider.

To learn more about OnStar services, press the blue **OnStar** button, visit **onstar.com**, call 1-888-4-ONSTAR (1-888-466-7827), or refer to your Owner's Manual.

CUSTOMER ASSISTANCE

1-800-458-8006

Cadillac Customer Assistance is available anytime to answer questions or provide additional information.

CADILLAC ONLINE OWNER CENTER

Create an account at **my.cadillac.com** to access an online Owner's Manual and helpful how-to videos, track your service history and warranty status, manage your OnStar and Connected Services vehicle plans, review your current Vehicle Diagnostics report (active service account required) and more.

MYCADILLAC MOBILE APP

Download the myCadillac app to your compatible smartphone (or device) and, if your vehicle is properly equipped, you can start or turn off your engine, lock or unlock your doors, view key diagnostic information, set parking information and more.

The app is available on select Apple and Android devices. Service availability, features and functionality vary by vehicle, device and data plan. Device data connection required. Visit **onstar.com** for more details. Download the mobile app from your compatible mobile device's app store.

We recommend always using ACDelco or genuine GM service parts.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2019 by General Motors. All rights reserved.

