



# TACOMA

## 2 0 1 7



QUICK REFERENCE GUIDE

# 2017

## TACOMA

This Quick Reference Guide is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The Quick Reference Guide is not intended as a substitute for the Owner's Manual located in your vehicle's glove box. We strongly encourage you to review the Owner's Manual and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Tacoma.

### *A word about safe vehicle operations*

This Quick Reference Guide is not a full description of Tacoma operations. Every Tacoma owner should review the Owner's Manual that accompanies this vehicle.

Pay special attention to the boxed information highlighted in color throughout the Owner's Manual. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this Quick Reference Guide is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

# INDEX

## OVERVIEW

|  |     |
|--|-----|
| Engine maintenance                     | 9   |
| Fuel tank door release and cap         | 6   |
| Hood release                           | 6   |
| Indicator symbols                      | 4-5 |
| Instrument cluster                     | 4   |
| Instrument panel                       | 2-3 |
| <i>Keyless entry</i> <sup>1,2</sup>    | 7   |
| Light control-Instrument panel         | 6   |
| <i>Smart Key system</i> <sup>1,2</sup> | 8   |

## FEATURES & OPERATIONS

|  |       |
|--|-------|
| Active traction control  | 24    |
| Air conditioning/heating   | 21    |
| Audio  | 18-19 |
| Automatic transmission   | 10    |
| Blind Spot Monitor (BSM) with<br>Rear Cross Traffic Alert (RCTA) | 25    |
| Clock  | 22    |
| Clutch start cancel  | 13    |
| Crawl Control  | 12    |
| Cruise control   | 17    |
| Door locks-Power   | 22    |
| Four-wheel drive   | 11    |
| <i>Garage door opener (HomeLink®)</i> <sup>3</sup>               | 25    |
| <i>Lights</i> <sup>1</sup> & <i>turn signals</i>                 | 16    |
| Manual transmission  | 11    |
| Moon roof  | 20    |
| Multi-Information Display (MID)                                  | 20    |
| Multi-terrain select   | 12    |
| Odometer and trip meter  | 13    |
| Parking brake  | 14    |
| Power outlets  | 23    |
| Rear differential lock   | 24    |
| Rear parking assist  | 26    |
| Rear view monitor system   | 26    |
| Seat adjustments-Front   | 14    |
| Seat heaters   | 22    |
| Seats-Folding rear   | 15    |

## FEATURES & OPERATIONS (continued)

|                                    |    |
|------------------------------------|----|
| Seats-Head restraints              | 14 |
| Tilt and telescopic steering wheel | 13 |
| TRAC/VSC OFF switch                | 24 |
| Trailer lights                     | 23 |
| Windows-Power                      | 16 |
| Windows-Power Sliding              |    |
| Rear window                        | 26 |
| Windshield wipers & washers        | 17 |

## SAFETY & EMERGENCY FEATURES

|   |       |
|---|-------|
| Doors-Child safety locks                            | 28    |
| Floor mat installation                              | 31    |
| Seat belts  | 27    |
| Seat belts-Shoulder belt anchor                     | 27    |
| Spare tire & tools                                  | 29    |
| Star Safety System™                                 | 30-31 |
| Tire Pressure Monitoring<br>(warning) System (TPMS) | 28    |

## BLUETOOTH® DEVICE PAIRING SECTION

32-41

 
 
<sup>1</sup> Visit your Toyota dealer for information on customizing this feature.

<sup>2</sup> Programmable by customer. Refer to the Owner's Manual for instructions and more information.

<sup>3</sup> HomeLink® is a registered trademark of Gentex Corporation.

# OVERVIEW

## Instrument panel

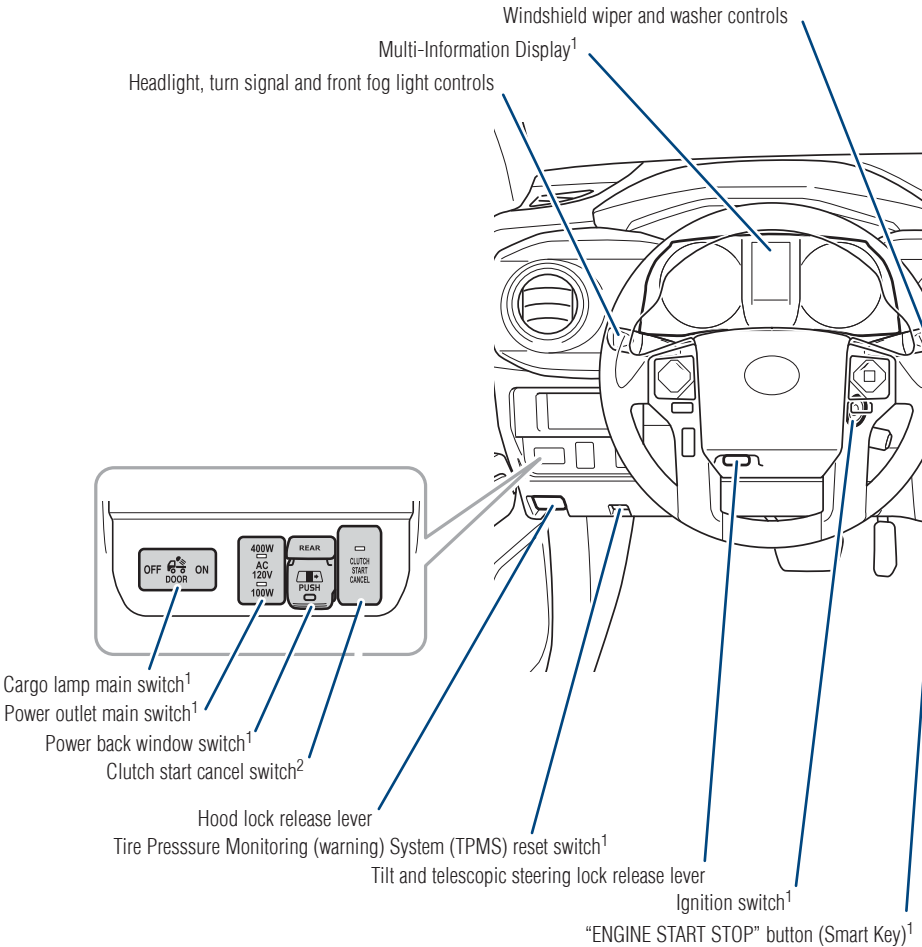
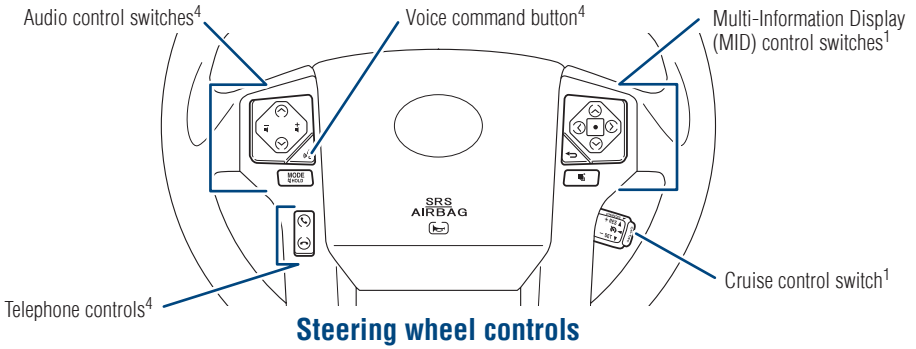


<sup>1</sup> If equipped.

<sup>2</sup> Manual transmission only.

<sup>3</sup> Automatic transmission only.

  
<sup>4</sup> For details, refer to the "Navigation System Owner's Manual" and "2017 Entune™ Audio Quick Reference Guide."

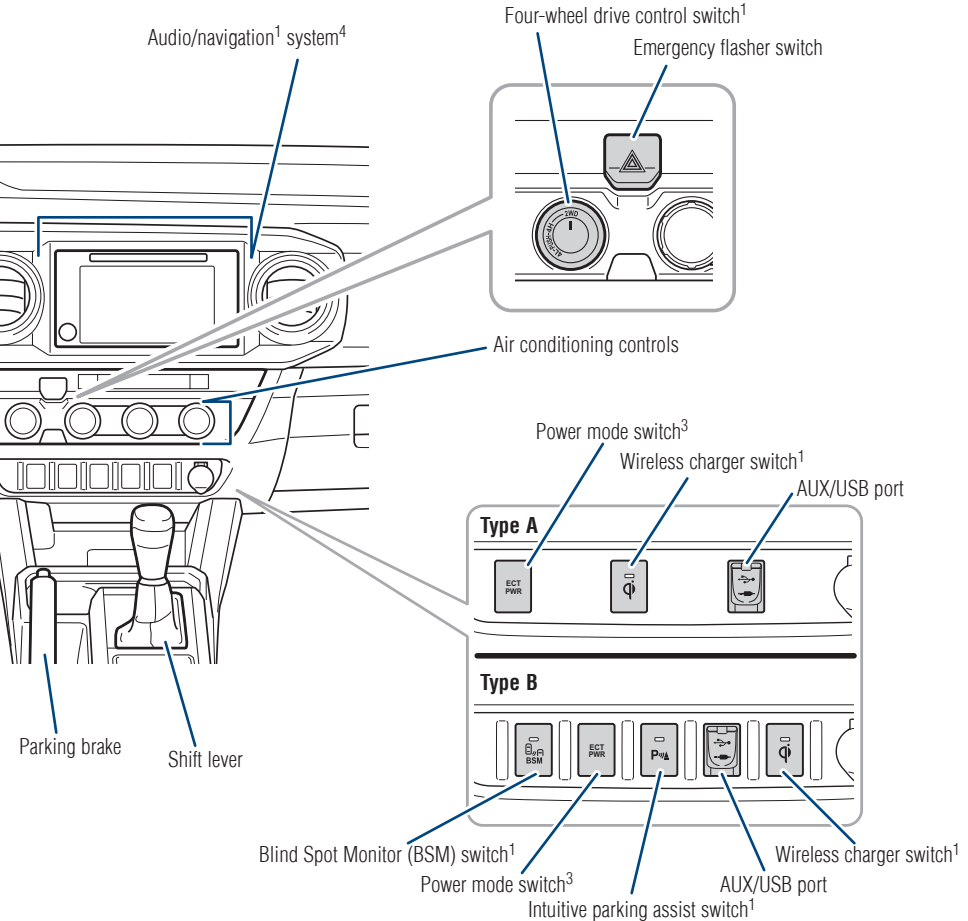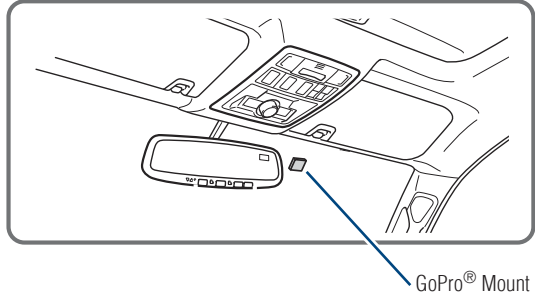


# OVERVIEW

## Instrument cluster
 
### Vehicles without a Multi-Information Display (MID)

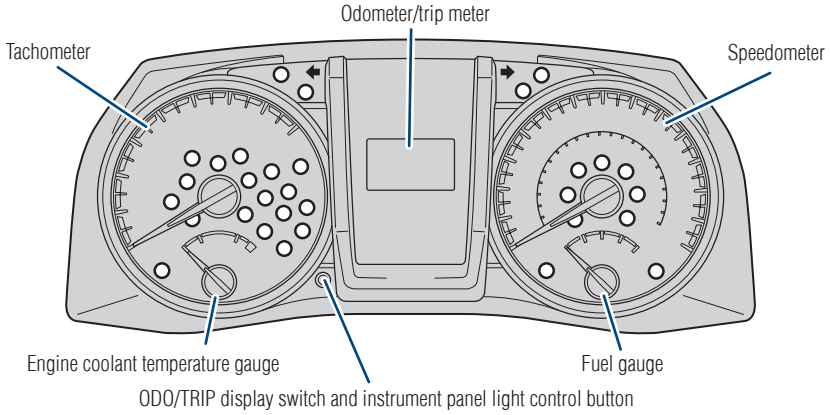

### Vehicles with a Multi-Information Display (MID)

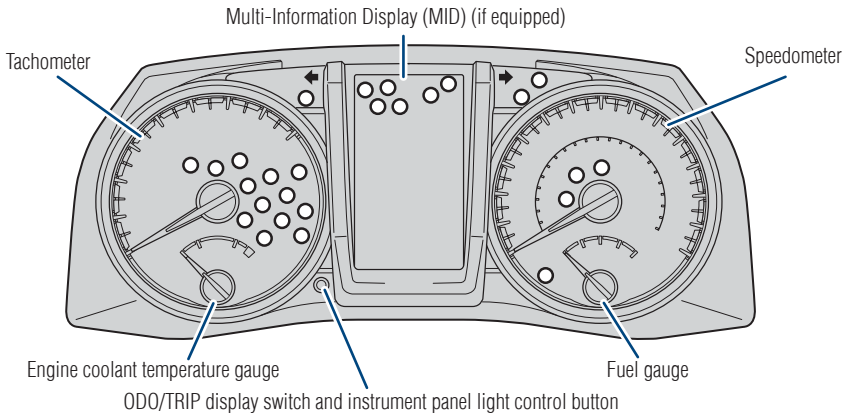 

○ Service indicators and reminders

## Indicator symbols

For details, refer to "Indicators and warning lights," Section 2-2, 2017 Owner's Manual.



Master warning<sup>1</sup>



Maintenance required warning<sup>1,2</sup>



Malfunction/Check Engine indicator<sup>1</sup>



Charging system warning<sup>1,2</sup>



Brake system warning<sup>1</sup>



Anti-lock Brake System warning<sup>1</sup>



Low engine oil pressure warning<sup>1,2</sup>



Low engine oil level warning light<sup>2</sup>



Automatic Transmission fluid temperature warning<sup>1,2</sup>



Front passenger occupant classification indicator/  
Front passenger airbag ON/OFF indicator<sup>1</sup>



Airbag SRS warning<sup>1</sup>



Driver/Front passenger seat belt reminder



Open door warning<sup>2</sup>



Parking brake indicator



Low Tire Pressure Warning<sup>1,5</sup>



Security indicator<sup>5</sup>



Blind Spot Monitor (BSM)<sup>5</sup> and outside rear view mirror indicator



Power mode indicator



Multi-terrain select indicator<sup>5</sup>



Crawl control indicator<sup>5</sup>



Brake Override System warning light<sup>1,2</sup>



Low fuel level warning



Arrow direction indicates fuel tank door position



SET Cruise control indicator<sup>4</sup>/  
Cruise control SET indicator<sup>1,4,5</sup>



Four-wheel drive indicator



Low speed four-wheel drive indicator



Rear differential lock indicator<sup>1,3,5</sup>



Vehicle Stability Control (VSC) OFF indicator<sup>1</sup>



Active traction control system indicator<sup>5</sup>



Traction control (TRAC) OFF indicator<sup>1</sup>



AUTO Limited Slip Differential (AUTO LSD) indicator<sup>1</sup>



Slip indicator<sup>1</sup>



Headlight low beam indicator



Headlight high beam indicator



Turn signal indicator



Fog light indicator<sup>5</sup>



Low outside temperature indicator

<sup>1</sup> If indicator does not turn off within a few seconds of starting engine, there may be a malfunction. Have vehicle inspected by your Toyota dealer.

<sup>2</sup> Without Multi-Information Display (MID).

 
<sup>3</sup> If this light flashes, refer to "Rear differential lock system," Section 4-5, 2017 Owner's Manual.

<sup>4</sup> If this light flashes, refer to "Cruise control," Section 4-5, 2017 Owner's Manual.

<sup>5</sup> If equipped.


# OVERVIEW

## Fuel tank door release and cap

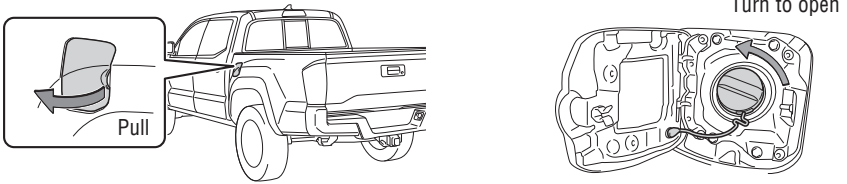


**NOTE:** Tighten until one click is heard. If the cap is not tightened enough, Check Engine "CHECK" indicator may illuminate.

## Hood release

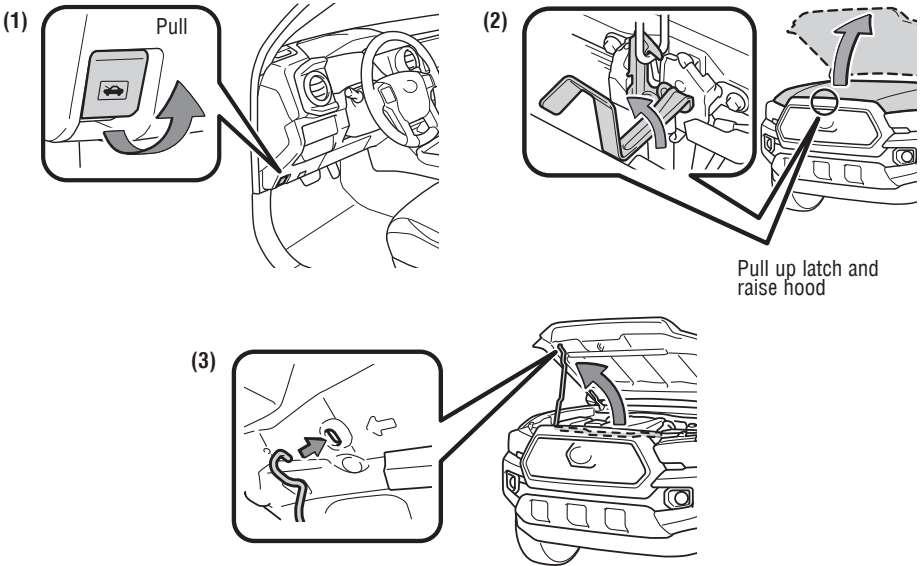 

## Light control-Instrument panel

 Brightness control

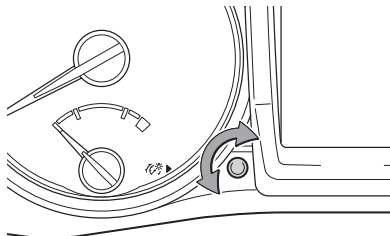



# Keyless entry (if equipped)

 
## LOCKING OPERATION

Type A



Push

Type B

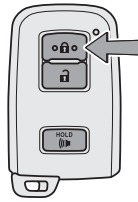

Push

## UNLOCKING OPERATION

 
Type A



Push

ONCE: Driver door  
TWICE: All doors

Type B

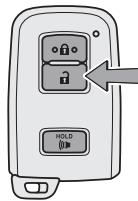

Push

ONCE: Driver door  
TWICE: All doors

**NOTE:** If a door is not opened within 30 seconds of unlocking, all doors will relock for safety.

## PANIC BUTTON

Type A



Push and hold

Type B



Push and hold

 


# OVERVIEW

## Smart Key system (if equipped)

### START FUNCTION


Vehicles with a Multi-Information Display

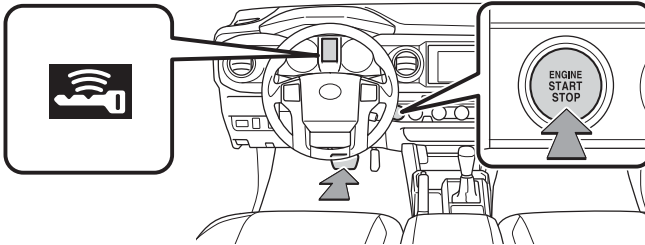

**NOTE:** Carry the electronic key to enable start function. Gear shift lever must be in Park and brake pedal depressed.

### POWER (WITHOUT STARTING ENGINE)

 Without depressing the brake pedal, pressing the engine switch will change the operation mode in succession from:

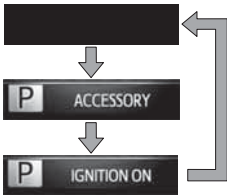

All systems OFF.

Accessories such as the radio will operate.

Power ON; the engine is not running.

### UNLOCKING OPERATION

#### Front door unlock

Grasp

 


Carry remote to unlock

### LOCKING OPERATION

#### Front door lock

Touch




Carry remote to lock


**NOTE:** Doors may also be locked/unlocked using remote.

# Engine maintenance
 
## 4 CYLINDER (2TR-FE) ENGINE

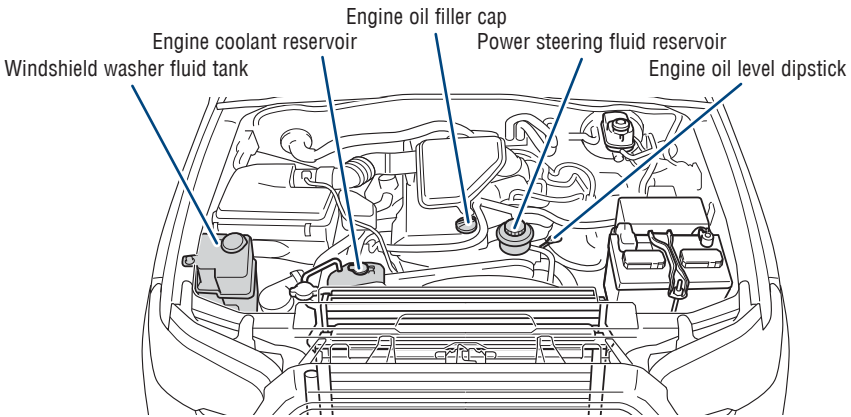


## 6 CYLINDER (2GR-FKS) ENGINE

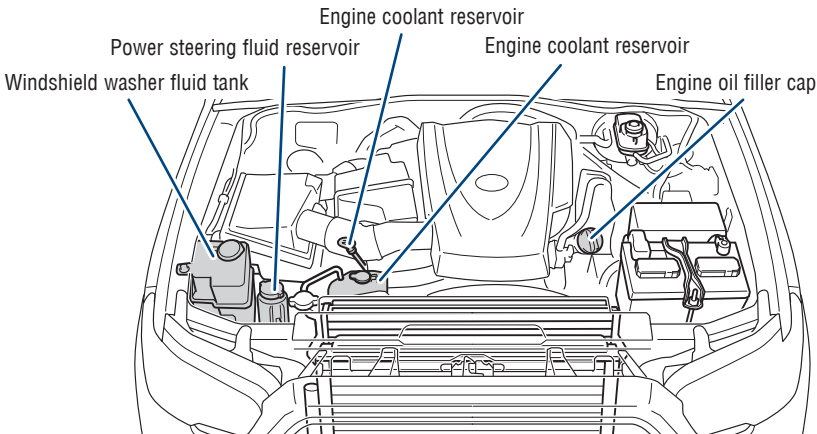 

**NOTE:** Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the “Warranty & Maintenance Guide.”

## Automatic transmission (if equipped)

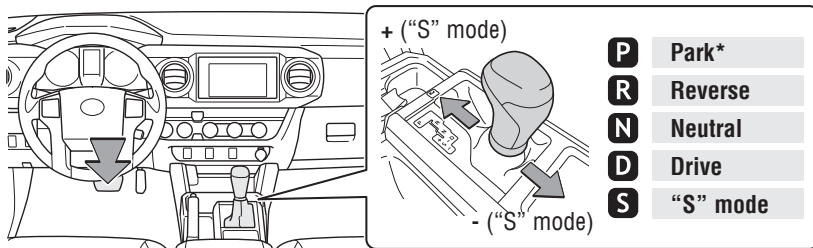 


\* The ignition switch must be "ON" and the brake pedal depressed to shift from Park.

The initial shift range in "S" mode is set automatically to 5 or 4 according to vehicle speed.


Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.

### POWER MODE

 Type A

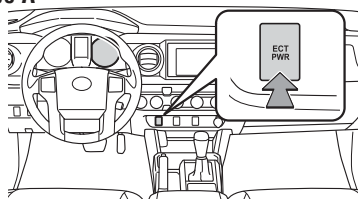


Type B

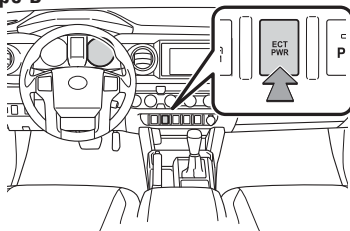 

**ECT  
PWR**

Use when high levels of response and feeling are desirable, such as when driving in mountainous regions or when pulling a trailer.


### "S" MODE

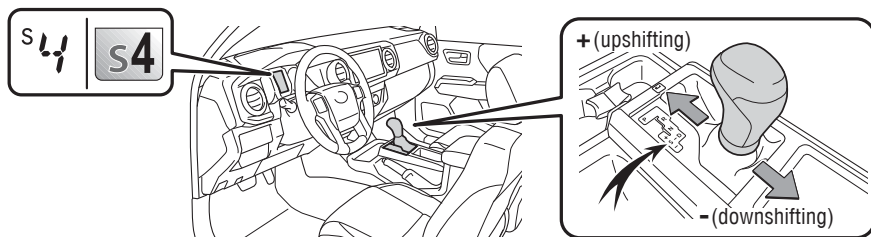 


Selecting shift ranges using "S" mode restricts the upper limit of the possible gear ranges, controls engine braking forces and prevents unnecessary upshifting.

## Manual transmission (if equipped)

 
### 5-SPEED

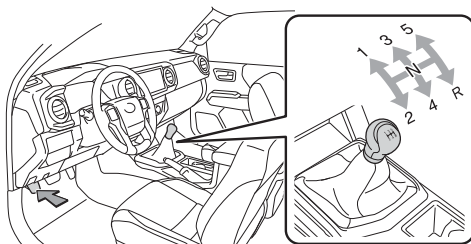

### 6-SPEED

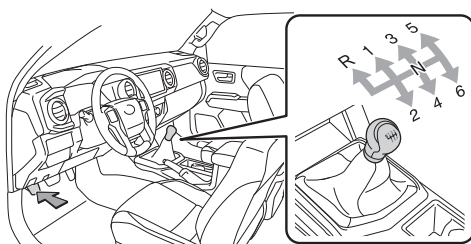 

## Four-wheel drive (if equipped)

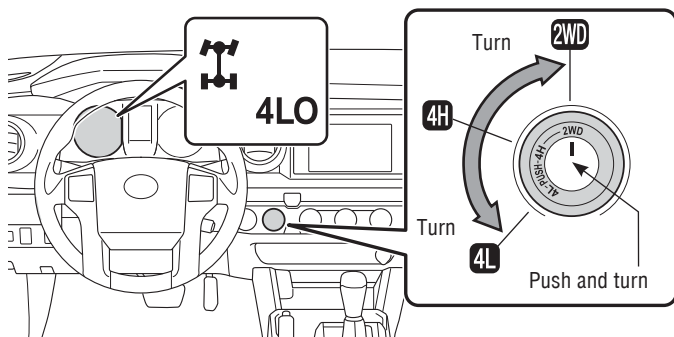 

**2WD** High speed (2WD)


**4H** High speed (4WD); Shift when speed is below 62 mph.

**4L** Low speed (4WD); Shift into neutral while stopped, or depress clutch pedal at speeds below 2 mph.

For best fuel economy and performance under normal driving conditions, keep in “2WD” position.


## FEATURES & OPERATIONS
 
### Multi-terrain select (if equipped)

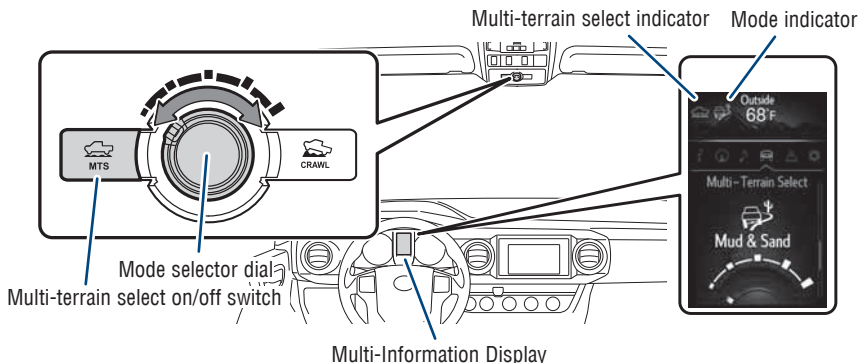


Improves driveability in off-road situations. Select one of five modes that most closely matches the terrain on which you are driving. Brake control can be optimized in accordance with the selected mode.

#### 5 modes

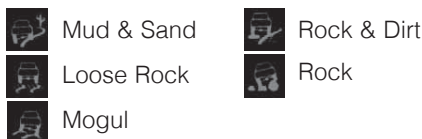 

Refer to Section 4-5 of the Owner's Manual for more information.


### Crawl Control (if equipped)

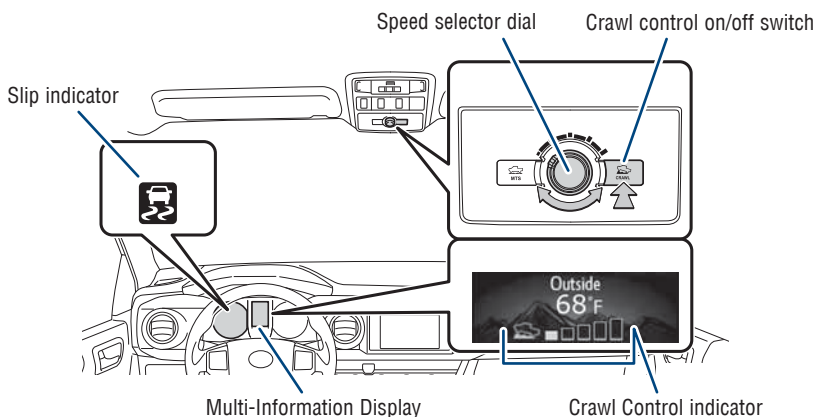 

Allows travel on extremely rough off-road surfaces at a fixed low speed without pressing the accelerator or brake pedal.

Refer to Section 4-5 of the Owner's Manual for more information.

## Clutch start cancel (if equipped)

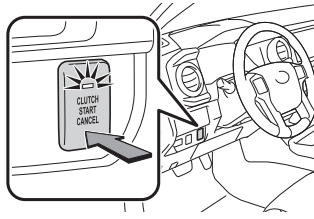 


The engine switch must be in the "ON" position.

The clutch start cancel switch allows you to start the engine and drive out of difficult situations when you can't take your foot off the brake to depress the clutch.

Refer to Section 4-5 of the Owner's Manual for more information.


## Tilt and telescopic steering wheel

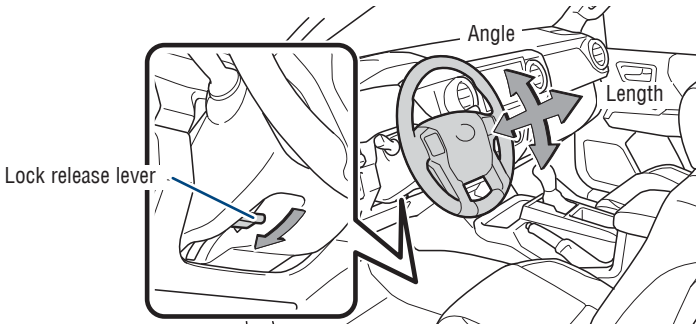 

Hold wheel, push lever down, set angle and length, and return lever.

**NOTE: Do not attempt to adjust while the vehicle is in motion.**

 
## Odometer and trip meter

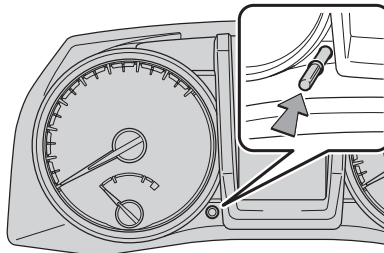

Push to switch display


## Parking brake

 Set

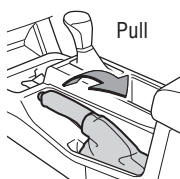

**BRAKE**

 Release

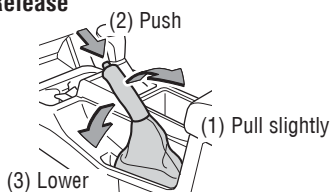


## Seats-Head restraints

ACCESS CAB


**Separate seats-Front**

 Vertical adjustment

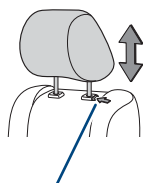

**Separate-Rear**

 
Folding

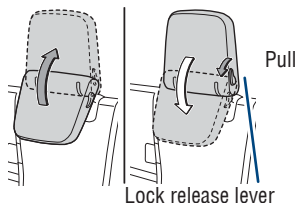

DOUBLE CAB


**Separate seats-Front**

 Vertical adjustment

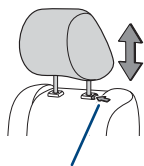


**Rear**

 Vertical adjustment

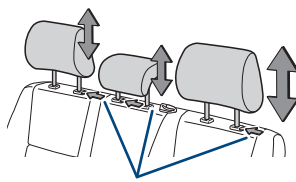


**Outer-Rear**

 Folding

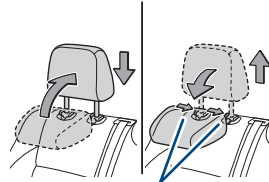


## Seats adjustments-Front

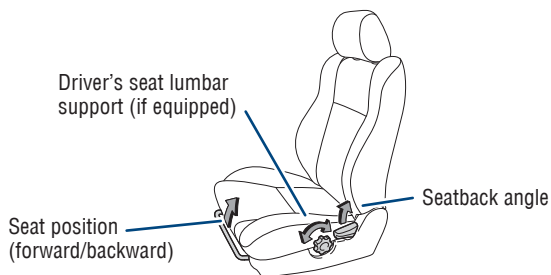 




# Seats-Folding rear
 
## ACCESS CAB

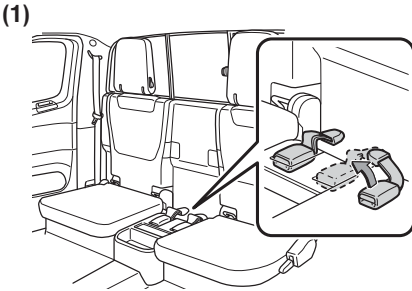


Stow the seat belt buckles.

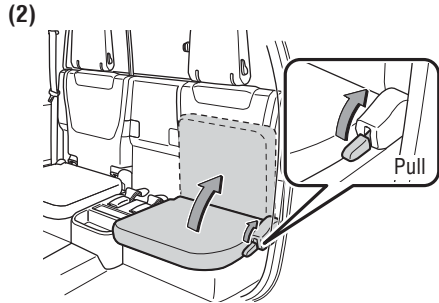 


Raise the bottom cushion up while pulling the lever until it locks.


## DOUBLE CAB

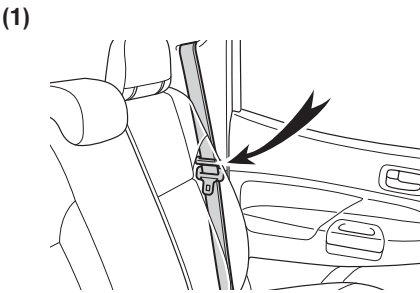 

 
Pass the seat belt through the seat belt hangers.

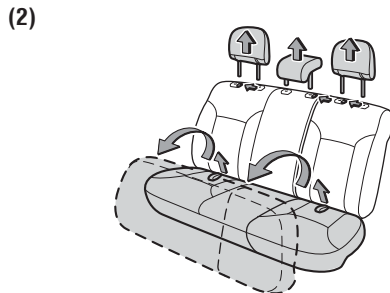

 Remove head restraints and swing the bottom cushion.

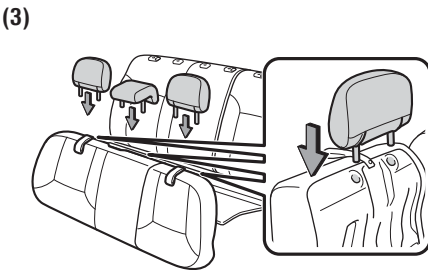

Attach the head restraints.




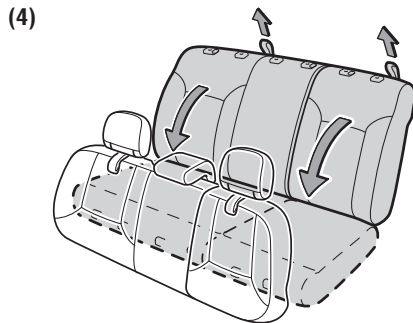 


Pull lock release strap and fold down the seatback.

# FEATURES & OPERATIONS
    
## Lights & turn signals

### HEADLIGHTS

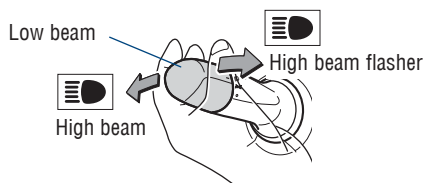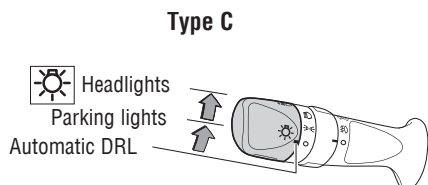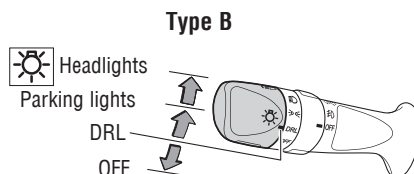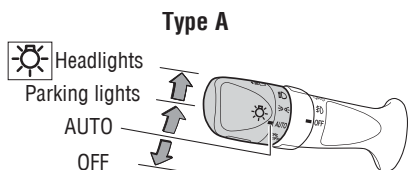


**Daytime Running Light system** Automatically turns on the front turn signal lights upon starting engine and releasing parking brake.


**Automatic light cutoff system** Automatically turns lights off when driver's door is opened with the ignition switch in the "ACC" or "LOCK" position.

### FRONT FOG LIGHTS (IF EQUIPPED)
 
### TURNING SIGNALS




 Front fog lights come on only when the headlights are on low beam.

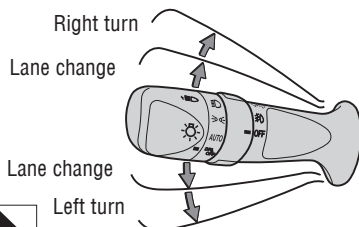


## Windows-Power (if equipped)
 
### Driver side

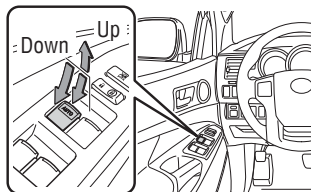

### Window lock switch

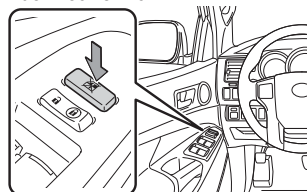 


**Automatic down operation (driver side only)** Push the switch completely down and release to fully open. To stop the window partway, operate the switch in the opposite direction.

**Window lock switch** Deactivates all passenger windows. Driver's window remains operable.


# Windshield wipers & washers
 
## WITH INTERMITTENT WIPER

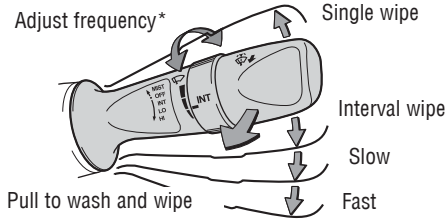


\* Intermittent windshield wiper frequency adjustment  
Rotate to increase/decrease wipe frequency.

## WITHOUT INTERMITTENT WIPER

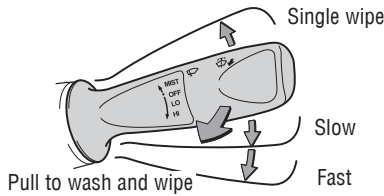 

# Cruise control (if equipped)
 
## TURNING SYSTEM ON/OFF

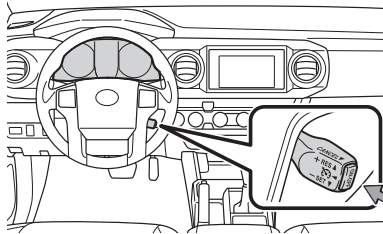


System ON/OFF

## FUNCTIONS



 **SET**

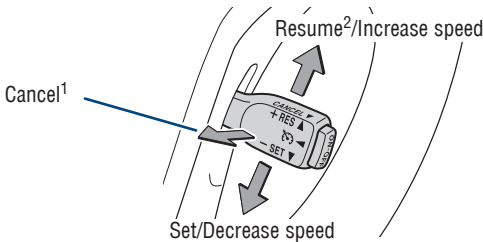


<sup>1</sup> The set speed may also be cancelled by depressing the brake pedal.

<sup>2</sup> The set speed may be resumed once vehicle speed exceeds 25 mph.


# FEATURES & OPERATIONS
 
## Audio

### Entune™ Audio

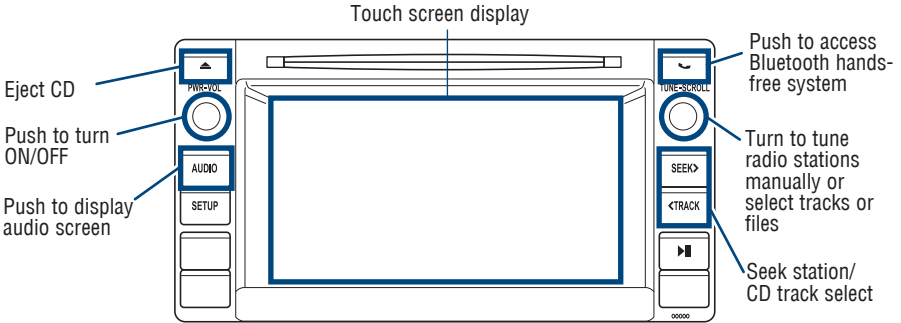


### Entune™ Audio Plus with Connected Navigation App

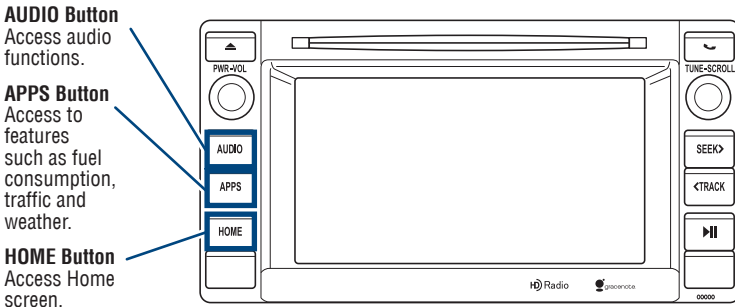 

HOME SCREEN - The home screen offers a two and three panel layout. Information and layout will vary depending on selected set up.

### Entune™ Premium (JBL®) Audio with Integrated Navigation App Suite

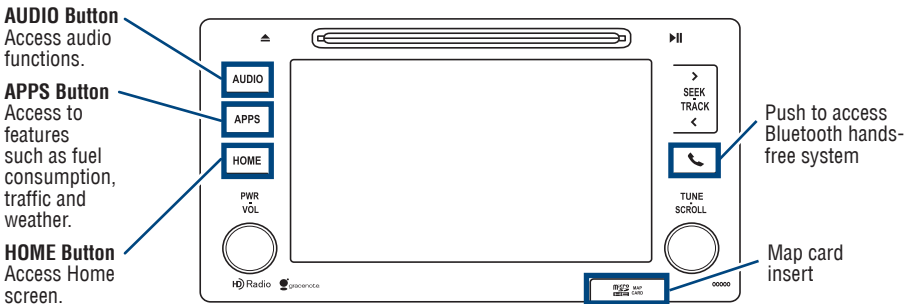 

HOME SCREEN - The home screen offers a two and three panel layout. Information and layout will vary depending on selected set up.


**NOTE: Concentrating on the road should always be your first priority while driving. Do not use the Entune system if it will distract you.**
 
<sup>1</sup> Refer to the "Navigation System Owner's Manual" and "2017 Entune™ Audio Quick Reference Guide."

## STEERING WHEEL SWITCHES

“**▲ ▼**” Use to search within the selected audio medium (radio, CD, etc.).

Push to change audio source or push and hold to mute or pause current operation.

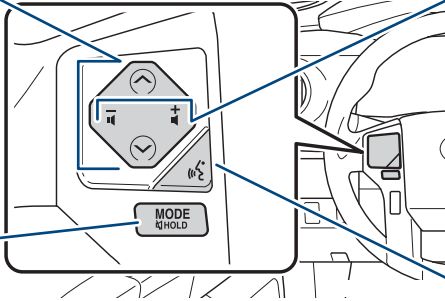


Push to increase or decrease volume.


Push to access voice command features.

## USB/AUX PORT
 
### Type A

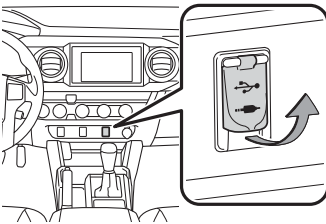

### Type B

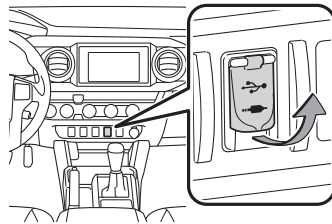 

**USB port** By connecting a USB-compatible portable audio device or USB memory to the USB port, you can listen to music from the portable audio device or USB memory through the vehicle's speaker system.



**AUX port** By inserting a mini plug into the AUX port, you can listen to music from a portable audio device through the vehicle's speaker system while in AUX mode.

Refer to the "Navigation System Owner's Manual" for instructions and more information.

# FEATURES & OPERATIONS
  
## **Multi-Information Display (MID) (if equipped)**


Push Multi-Information control switches to change information in the following:

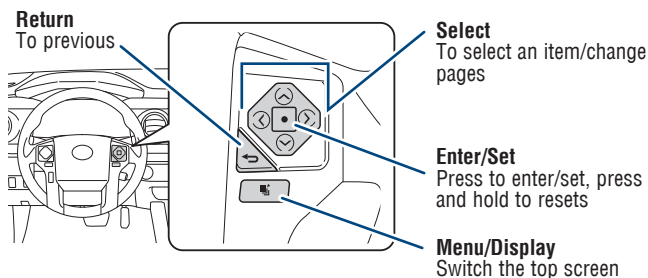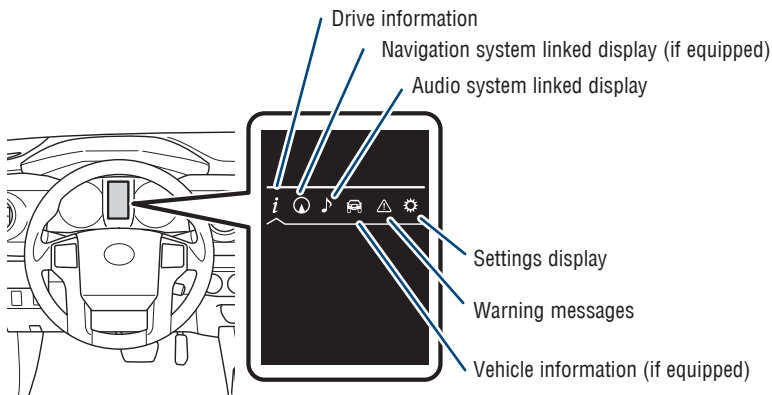


## **Moon roof (if equipped)**

### SLIDING OPERATION

 Recommended driving position to minimize wind noise.

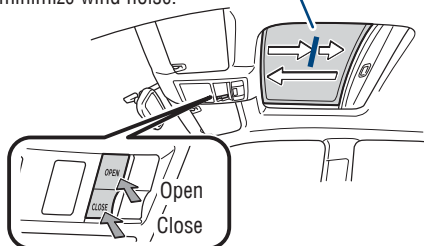

### TILTING OPERATION

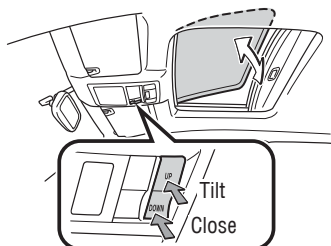 


Push once to open partway; again to open completely.

Push once to open; moon roof will automatically stop at the recommended position. Push again to open completely.

# Air conditioning/heating
 
## AUTOMATIC AIR CONDITIONING

### Display

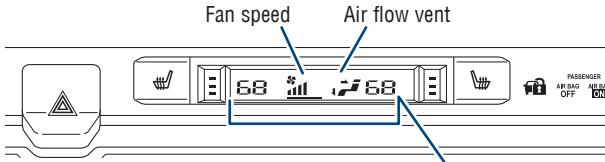


Temperature (Driver and passenger\*)

### Selectors and switches
 
#### Airflow vent adjuster

In “”, “” or “” mode, use outside air (“” indicator OFF).  
Recirculate cabin air (outside air when OFF)

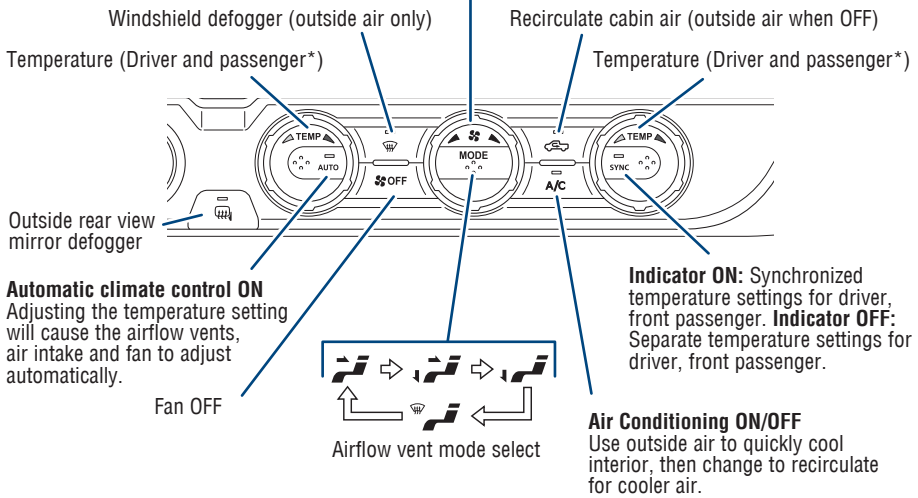


**Automatic climate control ON**  
Adjusting the temperature setting will cause the airflow vents, air intake and fan to adjust automatically.

**Indicator ON:** Synchronized temperature settings for driver, front passenger. **Indicator OFF:** Separate temperature settings for driver, front passenger.

**Air Conditioning ON/OFF**  
Use outside air to quickly cool interior, then change to recirculate for cooler air.

## MANUAL AIR CONDITIONING

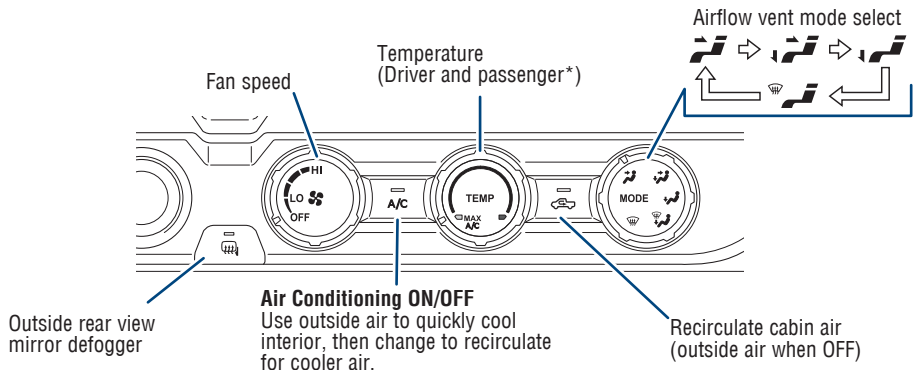 



**Air Conditioning ON/OFF**  
Use outside air to quickly cool interior, then change to recirculate for cooler air.

Recirculate cabin air (outside air when OFF)

\*If equipped


# FEATURES & OPERATIONS
  
## Seat heaters

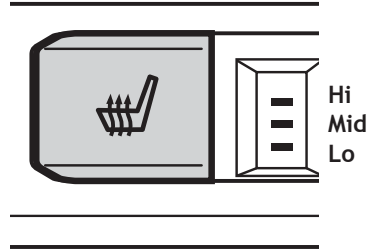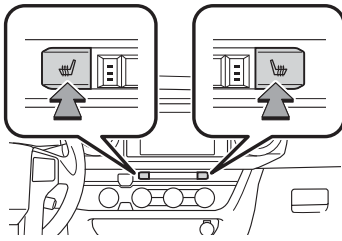

Press to **ON>Hi>Mid>Lo>OFF**

## Clock

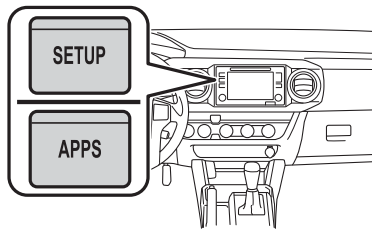 

To find your system, refer to the Audio section of this guide,


For Entune™ Audio

Push “SETUP” button next to the screen then select “General” in the touch screen to access clock setting.

For Entune™ Audio Plus with Connected Navigation App and Entune™ Premium (JBL®) Audio with Integrated Navigation App Suite

Push “APPS” button next to the screen, then select “General” in the touch screen to access clock setting.



## Door locks-Power (if equipped)

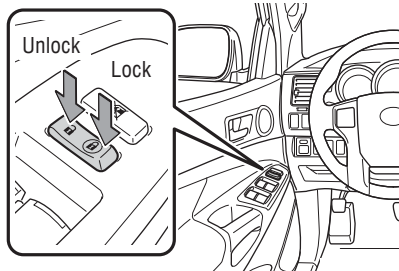 





## Power outlets

  
12V DC

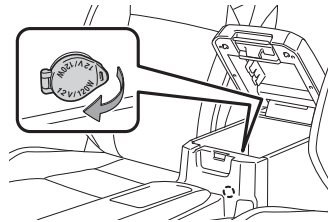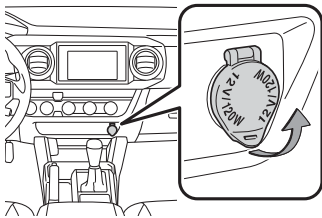

  Key must be in the "ACC" or "ON" position to be used.

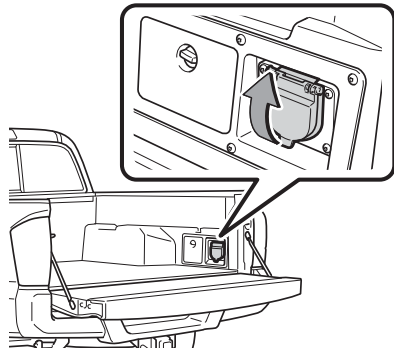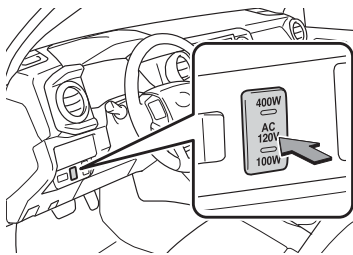

120 V AC/400 W

 


120 V AC/100 W


The power outlet can be used when the engine is running.

Refer to the Owner's Manual for more details.

## Trailer lights (if equipped)

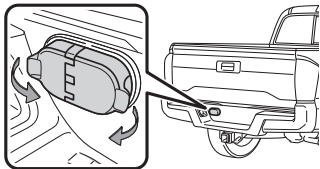 

 Use wire harness to connect trailer lights.

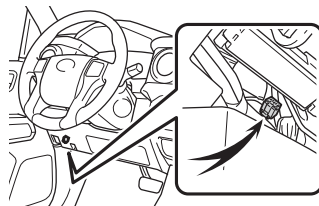


Use service connector for the trailer brake controller.

Refer to the Owner's Manual for more details.

## FEATURES & OPERATIONS
 
### Active traction control (if equipped)

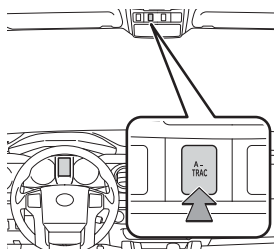

The active traction control system automatically helps prevent the spinning of four wheels when the vehicle is started or accelerated on slippery road surfaces.


Refer to the Owner's Manual for more information.

### TRAC/VSC OFF switch



 TRAC  
OFF


AUTO  
LSD

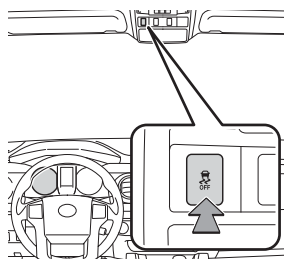

The TRAC OFF switch is used to switch between modes related to the TRAC, VSC and Auto LSD functions.

Refer to the Owner's Manual for more information.


### Rear differential lock (if equipped)

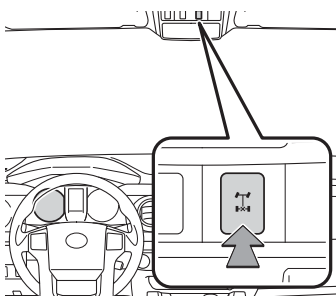 

Use **ONLY** when wheel spinning occurs in a ditch, or on slippery or unpaved surfaces. **DO NOT USE THE REAR DIFFERENTIAL LOCK IN CONDITIONS OTHER THAN THOSE SPECIFIED IN THE OWNER'S MANUAL. UNLOCK THE DIFFERENTIAL ONCE THE VEHICLE MOVES OUT OF THE TROUBLE SPOT.**

Refer to your Owner's Manual for complete details on this system before attempting to use it.

## Garage door opener (HomeLink®\*)(if equipped)

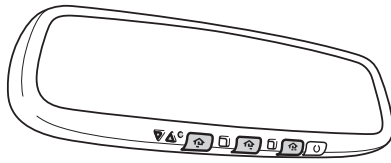 

Garage door openers manufactured under license from HomeLink®\* can be programmed to operate garage doors, estate gates, security lighting, etc.

Refer to “Garage door opener,” Section 6-4 in the Owner’s Manual for more details.

For programming assistance, contact HomeLink® at 1-800-355-3515, or visit <http://www.homelink.com>.


\* HomeLink® is a registered trademark of Johnson Controls, Inc.

## Blind Spot Monitor (BSM) with Rear Cross Traffic Alert (RCTA) (if equipped)

 Outside rear view mirror indicators

BSM main switch

Outside rear view mirror indicators

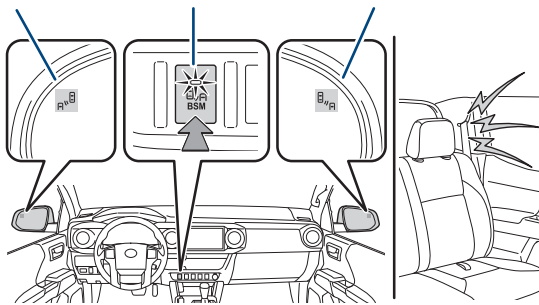

Rear Cross Traffic Alert buzzer\*

Drivers can change lanes and back up with enhanced confidence and safety by using the available Blind Spot Monitor (BSM) with Rear Cross Traffic Alert (RCTA).

Blind Spot Monitor brings an additional visual layer of confidence when changing lanes with illuminated side mirror indicators.


Rear Cross Traffic Alert works best for detecting oncoming cross traffic, helping the driver avoid unexpected collisions when backing up.

\*Rear Cross Traffic Alert function only.


Refer to the Owner’s Manual for limitations and more information.

## FEATURES & OPERATIONS
 
### Windows-Power Sliding Rear window (if equipped)

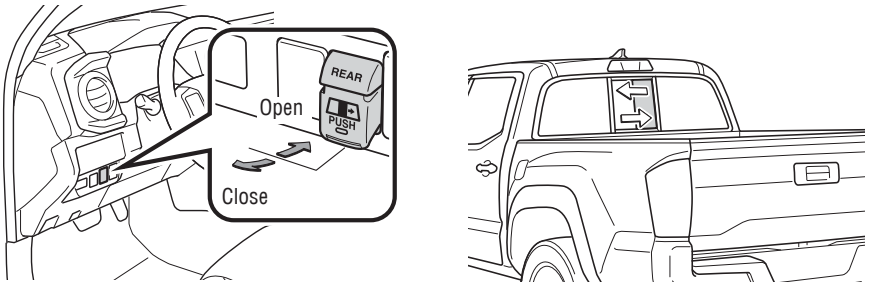


### Rear parking assist (if equipped)

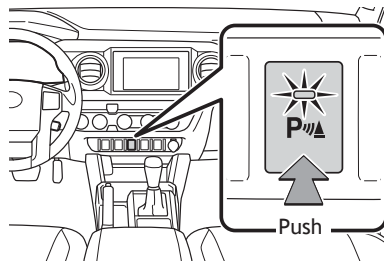 

The distance from your vehicle to nearby obstacles when parallel parking or maneuvering into a garage is measured by the sensors located in the rear of the truck and communicated via the Multi-Information Display (MID) and buzzer. Always check the surrounding area when using this system.

Refer to the Owner's Manual for more information.

### Rear view monitor system

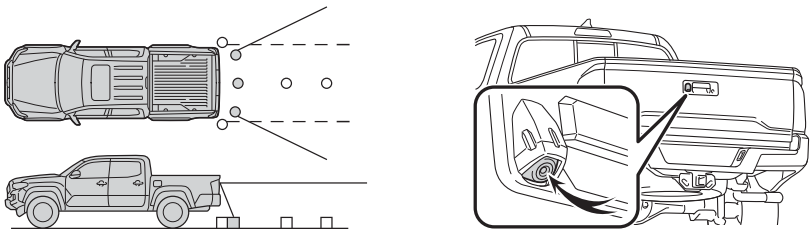 


The rear view monitor system displays an image of the view from the bumper of the rear area of the vehicle. The camera for the rear view monitor system is integrated in the tailgate handle.

To adjust the image on the rear view monitor screen, press the "SETUP" button and select "Display" on the "Setup" screen. Select "Camera" to adjust the screen contrast and brightness.

Refer to the Owner's Manual and Navigation System Owner's Manual for limitations and more details on this system.


## Seat belts

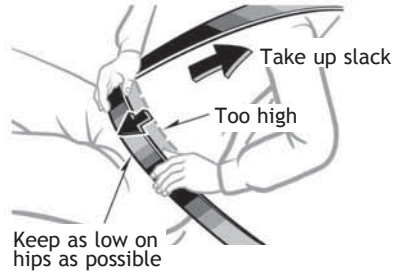 

**NOTE:** If a passenger's seat belt is fully extended, then retracted even slightly, the Automatic locking retractor (ALR) will prevent it from being re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.


To find more information about seat belts, and how to install a child restraint system, refer to the Owner's Manual.

## Seat belts-Shoulder belt anchor

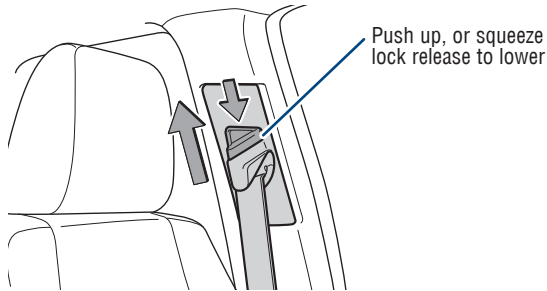 

## SAFETY & EMERGENCY FEATURES
 
### **Tire Pressure Monitoring (warning) System (TPMS)**

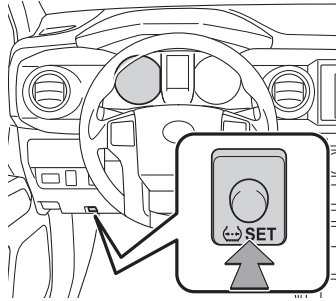

If tire pressure indicator is on, check/adjust each tire.


After adjusting tire pressures, or after tires have been rotated or replaced, turn the ignition switch to "ON" and press and hold the "SET" button until indicator blinks three times. Let the vehicle sit for a few minutes to allow initialization to complete.

*Refer to the load label on the door jamb or the Owner's Manual for tire inflation specifications.*

If the tire pressure indicator flashes for more than 60 seconds and then remains on, take the vehicle to your local Toyota dealer.

### **Doors-Child safety locks (double cab only)**
 
#### **Rear door**

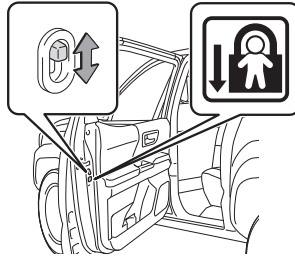


Moving the lever to "LOCK" will allow the door to be opened only from the outside.


# Spare tire & tools
 
## TOOL LOCATION

Double cab models  
-under the rear seat

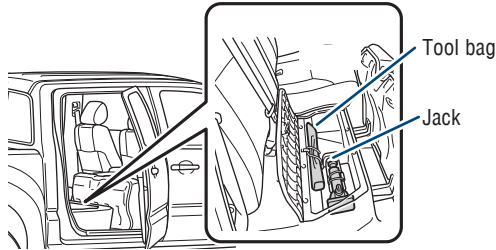


 Access cab models  
-under the rear seat

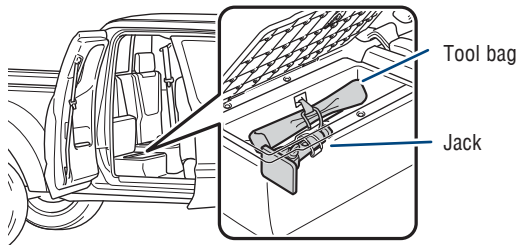


## REMOVING THE SPARE TIRE

 
Assemble the jack handle.

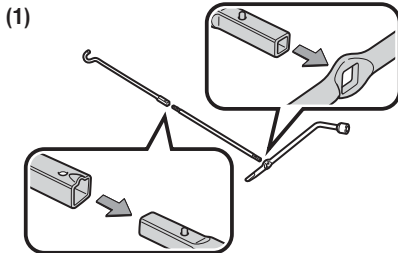

 Insert the jack handle end into the lowering screw.

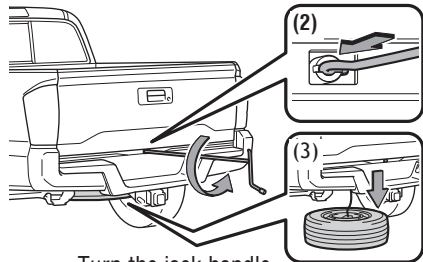

Turn the jack handle counterclockwise.

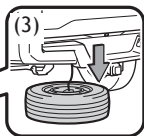 

Refer to the Owner's Manual for tire changing and jack positioning procedures.

# SAFETY & EMERGENCY FEATURES

## Star Safety System™

All new Toyota vehicles come standard with the Star Safety System™, which combines Vehicle Stability Control (VSC), Traction Control (TRAC), Anti-lock Braking System (ABS), Electronic Brake-force Distribution (EBD), Brake Assist (BA) and Smart Stop Technology (SST).

*Refer to the Owner's Manual for more details and important information on limitations to these systems.*

### VEHICLE STABILITY CONTROL (VSC)

VSC helps prevent loss of traction during cornering by reducing engine power and applying brake force to selected wheels.

Toyota's VSC monitors steering angle and the direction your vehicle is traveling. When it senses that the front or rear wheels begin to lose traction, VSC reduces engine power and applies braking to selected wheels. This helps restore traction and vehicle control.

### TRACTION CONTROL (TRAC)

VSC helps prevent loss of traction during cornering by reducing engine power, and Traction Control helps maintain traction on loose gravel and wet, icy, or uneven surfaces by applying brake force to the spinning wheel(s).

Toyota's TRAC sensors are activated when one of the drive wheels starts to slip. TRAC limits engine output and applies the brakes to the spinning wheel. This transfers power to the wheels that still have traction to help keep you on track.

### ANTI-LOCK BRAKE SYSTEM (ABS)

ABS helps prevent brakes from locking up by "pulsing" brake pressure to each wheel. This limits brake lockup and helps provide directional control for the current road conditions.

Toyota's ABS sensors detect which wheels are locking up and limits wheel lockup by "pulsing" each wheel's brakes independently. Pulsing releases brake pressure repeatedly for fractions of a second. This helps the tires attain the traction that current road conditions will allow, helping you to stay in directional control.

### ELECTRONIC BRAKE FORCE DISTRIBUTION (EBD)

Toyota's ABS technology has Electronic Brake-force Distribution (EBD) to help maintain control and balance when braking. Abrupt stops can cause a vehicle to tilt forward, reducing the braking power of the rear wheels. EBD responds to sudden stops by redistributing brake force to enhance the braking effectiveness of all four wheels.

### BRAKE ASSIST (BA)

Brake Assist is designed to detect sudden or "panic" braking, and then add braking pressure to help decrease the vehicle's stopping distance. When there's only a split second to react, Brake Assist can add additional brake pressure more quickly than just the driver alone can.



## SMART STOP TECHNOLOGY (SST)

Smart Stop Technology automatically reduces engine power when the accelerator and brake pedals are pressed simultaneously under certain conditions.

SST engages when the accelerator is depressed first and the brakes are applied firmly for longer than one-half second at speeds greater than five miles per hour.

 
 
 
SST doesn't engage if the brake pedal is depressed before the accelerator pedal, allowing vehicles to start on a steep hill and safely accelerate without rolling backward.

## Floor mat installation

There are two types of Toyota floor mats: carpeted and all-weather. Each vehicle has model-specific floor mats. Installation is easy.

To keep your floor mat properly positioned, follow these steps:

- Only use Toyota floor mats designed for your specific model.
- Use only one floor mat at a time, using the retaining hooks to keep the mat in place.
- Install floor mats right side up.

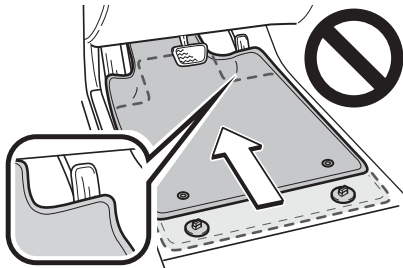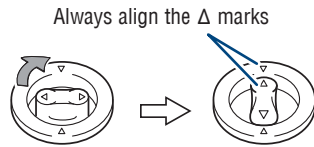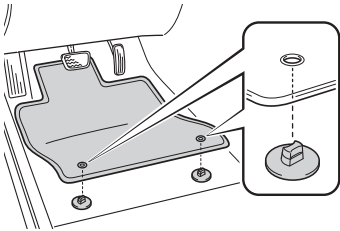

# **BLUETOOTH® DEVICE PAIRING SECTION**

 
Do not attempt the Bluetooth® Pairing process while driving.

To begin the Bluetooth® Pairing process, press the HOME button on the faceplate of your Toyota Vehicle Entune™ Multimedia Head Unit.<sup>1</sup>


## Bluetooth® Pairing for Android phone and Entune™ touch screen system

Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth. This pairing process is quick and easy: all Android mobile digital devices have Bluetooth integrated; all you have to do is setup the phone and multimedia system to “talk” to each other and form a connection.<sup>2</sup>

### Initiate Bluetooth® on your Android®

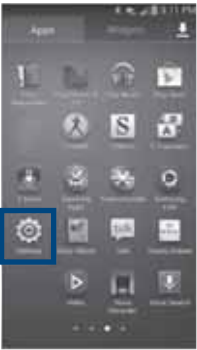

 **STEP 1**  
From your **APPS SCREEN**, select **SETTINGS**.

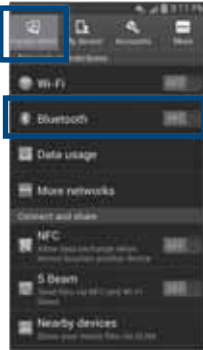

**STEP 2**  
Select **CONNECTIONS** and select **BLUETOOTH**.



**STEP 3**  
Ensure **BLUETOOTH** is **ON**.



**STEP 4**  
Select **YOUR PHONE DEVICE** to make it discoverable.

*Phone will seek out Bluetooth devices while remaining discoverable.*



### STEP 5

While your Android device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.

<sup>1</sup> To determine which head unit is installed in your vehicle, refer to the Audio section in this guide. Entune™ Premium Audio screens are shown in this section. Screens and features may vary by Entune™ system.

<sup>2</sup> Some Android devices may have slightly different SETTINGS screen layout depending on manufacturer of device and Android OS version.

# BLUETOOTH® DEVICE PAIRING

## Initiate Bluetooth® on your Entune™ Multimedia Head Unit

Once you have Bluetooth enabled on your phone and ready to pair, you will need to initiate Bluetooth on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.



### STEP 6

On your Toyota Vehicle Entune Multimedia Head Unit, Select **SETUP BUTTON** on the Home Screen.



### STEP 7

Select **BLUETOOTH**.


*Image shown is a sample image, features may vary.*



### STEP 8

Select **ADD**, to add your phone device.

 For Entune™ Audio System, press the **SETUP BUTTON** on the faceplate to access the Setup Screen.

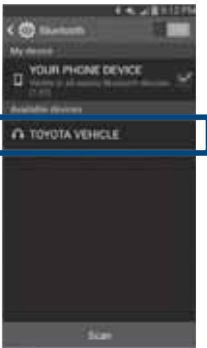

### STEP 9

 
Back on your smartphone, you can now select your **TOYOTA VEHICLE** in Bluetooth Settings.

*You may need to enter the provided Bluetooth PIN on your phone.*



### STEP 10


Your smartphone is now paired with Entune.

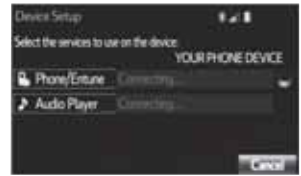

### STEP 11

Once paired, Entune will attempt to connect audio and contacts on your phone.
 
## Initiate Bluetooth® on your Entune™ Multimedia Head Unit

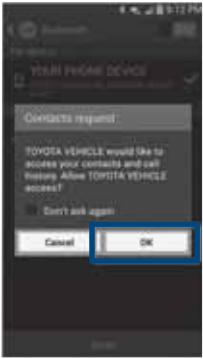

### STEP 12

Using your smartphone, you will need to allow Entune access to your messaging and contacts.

*It is recommended to check the "Don't ask again" box, so as not to have to press OK every time the phone makes a Bluetooth connection with your Toyota.*



### STEP 13

A confirmation will appear once your phone has been paired and connected.

#### Additional Resources

If you're having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:  
[www.toyota.com/connect](http://www.toyota.com/connect)

Your Toyota Owner's Manual  
Located in the vehicle glovebox

Toyota Customer  
Experience Center  
(800) 331-4331

#### Disclosures

This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.

1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
3. Android is a trademark of Google Inc.
4. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See [Toyota.com/entune](http://Toyota.com/entune) for details.

## Bluetooth® Pairing for iPhone and Entune™ touch screen system

**\*\*Do not attempt the Bluetooth® Pairing process while driving.\*\***

 
Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth. This pairing process is quick and easy: all iPhone mobile digital devices have Bluetooth integrated; all you have to do is setup the phone and multimedia system to “talk” to each other and form a connection.

### Initiate Bluetooth® on your iPhone®



#### STEP 1

From the **HOME SCREEN**, select **SETTINGS**.

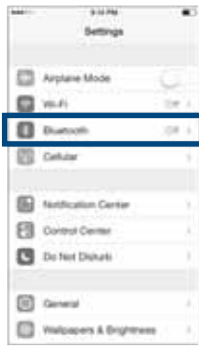

#### STEP 2

Select **BLUETOOTH**.



#### STEP 3

Ensure **BLUETOOTH** is **ON**.



#### STEP 4

Your iPhone will seek out Bluetooth devices while remaining discoverable.



#### STEP 5

While your iPhone device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.

## Initiate Bluetooth® on your Entune™ Multimedia Head Unit

Once you have Bluetooth enabled on your phone and ready to pair, you will need to initiate Bluetooth on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.



### STEP 6

On your Toyota Vehicle Entune Multimedia Head Unit, Select **SETUP BUTTON** on the Home Screen.

For Entune™ Audio System, press the **SETUP BUTTON** on the faceplate to access the Setup Screen.



### STEP 7


Select **BLUETOOTH**.

*Image shown is a sample image, features may vary.*



### STEP 8

 Select **ADD**, to add your phone device.

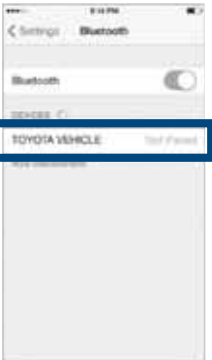

### STEP 9

 
Back on your smartphone, you can now select your **TOYOTA VEHICLE** in Bluetooth Settings.

*You may need to enter the provided Bluetooth PIN on your phone.*



### STEP 10


Your smartphone is now paired with Entune.

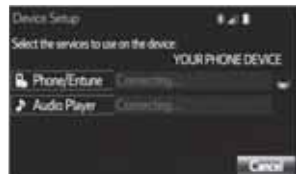

### STEP 11

Once paired, Entune will attempt to connect audio and contacts on your phone.
 
# BLUETOOTH® DEVICE PAIRING

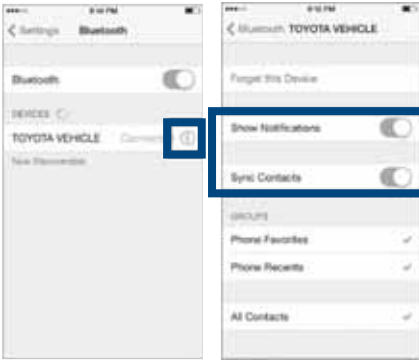

## STEP 12

Using your smartphone, you may need to allow Entune access to your messaging and contacts.

*Only current iPhone text messages can be viewed on the head unit. iPhone does not allow text message reply.*



## STEP 13

A confirmation will appear once your phone has been paired and connected.

### Additional Resources

If you're having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:  
[www.toyota.com/connect](http://www.toyota.com/connect)

Your Toyota Owner's Manual  
Located in the vehicle glovebox

Toyota Customer  
Experience Center  
(800) 331-4331

### Disclosures

This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.

1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
3. Android is a trademark of Google Inc.
4. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See Toyota.com/entune for details.

 


## Bluetooth® Pairing for Windows Phone and Entune™ touch screen system

**\*\*Do not attempt the Bluetooth® Pairing process while driving.\*\***


Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth. This pairing process is quick and easy: all Windows Phone mobile digital devices have Bluetooth integrated; all you have to do is setup the phone and multimedia system to “talk” to each other and form a connection.

### Initiate Bluetooth® on your Windows Phone®

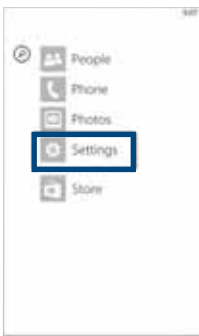

#### STEP 1

 From your APP LIST, select **SETTINGS**.

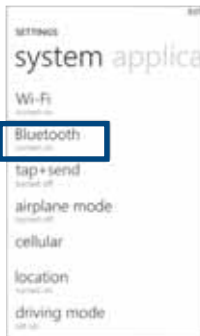

#### STEP 2

Select **BLUETOOTH**.



#### STEP 3

Ensure **BLUETOOTH** is **ON**.



#### STEP 4

Phone will seek out Bluetooth devices while remaining discoverable.



#### STEP 5

While your iPhone device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.

# BLUETOOTH® DEVICE PAIRING

## Initiate Bluetooth® on your Entune™ Multimedia Head Unit

Once you have Bluetooth® enabled on your phone and ready to pair, you will need to initiate Bluetooth® on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.



 
### STEP 6

On your Toyota Vehicle Entune Multimedia Head Unit, Select **SETUP BUTTON** on the Home Screen.



### STEP 7

Select **BLUETOOTH**.  
*Image shown is a sample image, features may vary.*

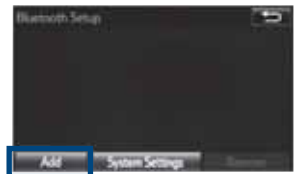

### STEP 8

Select **ADD**, to add your phone device.

For Entune™ Audio System, press the **SETUP BUTTON** on the faceplate to access the Setup Screen.



### STEP 9

 
Back on your smartphone, you can now select your **TOYOTA VEHICLE** in Bluetooth Settings.

*You may need to enter the provided Bluetooth PIN on your phone.*



### STEP 10


Your smartphone is now paired with Entune.

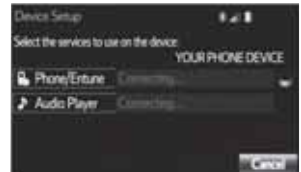

### STEP 11

Once paired, Entune will attempt to connect audio and contacts on your phone.
 
## Initiate Bluetooth® on your Entune™ Multimedia Head Unit

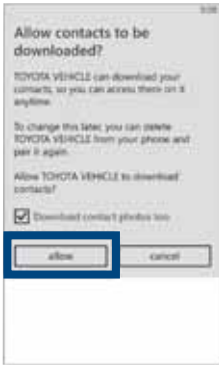

### STEP 12

Using your smartphone, you may need to allow Entune access to your contacts.



### STEP 13

A confirmation will appear that your phone has been paired and connected.

#### Additional Resources

If you're having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:  
[www.toyota.com/connect](http://www.toyota.com/connect)

Your Toyota Owner's Manual  
Located in the vehicle glovebox

Toyota Customer  
Experience Center  
(800) 331-4331

#### Disclosures

This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.

1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
3. Android is a trademark of Google Inc.
4. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See [Toyota.com/entune](http://Toyota.com/entune) for details.



CUSTOMER EXPERIENCE CENTER

1-800-331-4331



Printed in U.S.A. 7/16  
16-MKG-09517



00505QRG17TAC