

2020



XT5 Convenience & Personalization Guide

cadillac.com



Review this quick reference guide for an overview of some important features in your Cadillac XT5. Some optional equipment described in this guide (denoted by ♦) may not be included in your vehicle. More information can be found in your Owner's Manual and at my.cadillac.com.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions.

INSTRUMENT PANEL



REMOTE KEYLESS ENTRY TRANSMITTER

Lock

Press to lock all doors.

Press and hold for 1 second to fold the power mirrors. To enable operation, go to Settings > Vehicle > Comfort and Convenience.

Unlock

Press to unlock the driver's door only or all doors.

Press and hold for 1 second to unfold the power mirrors.

Press and hold to open all windows.

Remote Start

Press and release the  Lock button and then immediately press and hold  to start the engine.

Vehicle Locator/Panic Alarm

Press and release to locate your vehicle. The exterior lamps flash and the horn chirps 3 times.

Press and hold for 3 seconds to activate the alarm. Press it again to cancel the alarm.

Power Liftgate

Press twice to open or close the power liftgate. Press once to stop power operation.

Door/Glove Box Key

Press the button (A) on the side of the transmitter to pull out the key. Refer to your Owner's Manual for instructions to remove the key cylinder cap on the driver's door handle.

Note: To change or enable some Remote Lock and Unlock settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.

See Keys, Doors and Windows in your Owner's Manual.

◆ Optional equipment



KEYLESS ACCESS SYSTEM

The Keyless Access System enables operation of the doors and liftgate without removing the Remote Keyless Entry (RKE) transmitter from your pocket or purse. The transmitter must be within 3 feet of the door being unlocked or within 3 feet of the liftgate.

KEYLESS UNLOCKING

With the RKE transmitter within range:

- ▶ Press the button on the driver's door handle to unlock the driver's door; press it again within 5 seconds to unlock all doors.
- ▶ Press the button on a passenger door handle to unlock all doors.
- ▶ Press the touch pad under the liftgate handle to open the liftgate.



KEYLESS LOCKING

With the ignition off, the RKE transmitter removed from the vehicle, and all doors closed:

- ▶ Press the button on any door handle to lock all doors and the liftgate immediately.
- ▶ If Passive Locking is turned on, all doors and the liftgate will lock automatically after a short delay.

Note: To change the Keyless Unlocking and Locking settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.

See Keys, Doors and Windows in your Owner's Manual.

KEYLESS START

The Remote Keyless Entry (RKE) transmitter must be in the vehicle to turn on the ignition.

START

- ▶ With the vehicle in Park or Neutral, **press the brake pedal** and then press the **ENGINE START/STOP** button to start the engine. The green indicator on the button will illuminate.



Note: If the RKE transmitter battery is weak, place the transmitter in the pocket in the center console storage compartment to enable the engine to start. Replace the transmitter battery as soon as possible.

STOP/OFF

- ▶ Shift to Park and press the **ENGINE START/STOP** button to turn off the engine.

Power will be available for 10 minutes to operate the audio system until the driver's door is opened and to operate the windows and sunroof until any door is opened.

ACCESSORY

- ▶ With the engine off and the brake pedal NOT depressed, press the **ENGINE START/STOP** button to place the ignition system in the Accessory mode. The amber indicator on the button will illuminate.

See Driving and Operating in your Owner's Manual.

AUTO ENGINE STOP/START

The fuel-saving stop/start system automatically turns off the engine, referred to as an Auto Stop, when the brake pedal is pressed and the vehicle is at a complete stop, if operating conditions are met. In Auto Stop mode, the tachometer gauge will read AUTO STOP. When the brake pedal is released or the accelerator pedal is pressed, the engine will restart. After parking the vehicle and turning off the engine, the tachometer gauge will read OFF.



The engine may remain running or restart when the vehicle is stopped if:

- A minimum vehicle speed was not reached prior to stopping.
- The engine or transmission is not at the required operating temperature.
- The outside temperature is not in the required operating range.
- The shift lever is in any gear other than Drive (D).
- The battery charge is low.
- The current climate control settings require the engine to run.
- The Auto Stop has reached the maximum allowed time.

AUTO ENGINE STOP/START DISABLE

- ▶ Press the **(A)** button on the center of the instrument panel when the engine is running to turn off the automatic stop/start system. The button indicator is illuminated when the system is on.

The system is turned on each time the vehicle is started.

See Driving and Operating in your Owner's Manual.

ELECTRONIC PRECISION SHIFT

The automatic transmission shift pattern is displayed on top of the shift lever. The selected gear position illuminates in red on the shift lever. The shift lever always starts in the center position and, after shifting, returns to the center position.



Park – Press the button (A) on top of the lever to shift into Park. To shift out of Park, press and hold the shift lock button (B) on the side of the lever while selecting the desired gear.

Reverse – Press and hold the shift lock button (B) and move the lever forward completely (pass the detent) to shift into Reverse.

Neutral – Move the lever forward (to the detent) to shift into Neutral.

Note: The transmission will not stay in Neutral for an extended period. It will automatically shift into Park. See Automated Car Wash Mode.

Drive – Move the lever rearward to shift into Drive.

Tap Shift Mode – With the transmission in Drive, pull back on the lever to shift manually. Press the left steering wheel paddle to downshift and the right paddle to upshift. Pull back on the lever again to return to Drive.

AUTOMATED CAR WASH MODE

There are different procedures for placing the transmission in Neutral with the engine on or off and if the driver exits the vehicle. Refer to your Owner's Manual for each procedure.

See Driving and Operating in your Owner's Manual.

◆ Optional equipment

DRIVER MODE CONTROL

Driver Mode Control automatically adjusts the steering, suspension, and powertrain tuning in real time. Pressing the MODE button on the center console displays the mode menu on the instrument cluster and activates the next available mode.



ALL-WHEEL DRIVE (AWD) OPERATION◆

On AWD models, the vehicle can operate in front-wheel drive or all-wheel drive.

- ▶ Press the **MODE** button to select Tour (front-wheel drive), AWD, Sport, or Off-Road mode.

If the vehicle is turned off while in Tour or AWD mode, it will stay in that mode the next time the vehicle is started. If in Sport or Off-Road mode, the vehicle defaults to Tour mode when restarted.

FRONT-WHEEL DRIVE (FWD) OPERATION

- ▶ Press the **MODE** button on the center console to select the Tour, Snow/Ice, or Sport mode.

The vehicle defaults to Tour mode each time the vehicle is started.

See Driving and Operating in your Owner's Manual.

ELECTRIC PARKING BRAKE

- ▶ To apply the parking brake, press the (P) parking brake switch on the left side of the instrument panel.
- ▶ To release the parking brake, turn on the ignition, press the brake pedal, and then press the (P) switch.

See Driving and Operating in your Owner's Manual.

STEERING WHEEL CONTROLS

A. VOICE RECOGNITION

Press to Talk

Press to answer an incoming call or to use voice recognition with the OnStar, Bluetooth or infotainment system.

End Call/Mute

Press to end/decline a call or mute/unmute the audio system.

See your Cadillac User Experience Manual.

B. CRUISE CONTROL

On/Off

SET- Set Speed

With Cruise Control on, press the SET- button to set the cruise speed.

RES+ Resume Speed

With Cruise Control on, press the RES+ button to resume the previous set speed.

Adjust Speed

With a cruise speed set, press the RES+ or SET- button to the first detent to increase or decrease the set speed by 1-mph increments; press to the second detent to increase or decrease the set speed to the next 5-mph interval on the speedometer.



Cancel

Press to cancel Cruise Control without erasing the set speed from memory.

Press and hold to switch between Cruise Control and Adaptive Cruise Control-Advanced.

Follow Distance Gap (Adaptive Cruise Control-Advanced)

Press to select a gap setting (the time between your vehicle and a vehicle detected directly ahead) of Far, Medium, or Near.



See Driving and Operating in your Owner's Manual.

C. AUDIO CONTROLS

Volume

Press  or  to adjust the volume.

Next/Previous

Press  or  to go to the next or previous favorite radio station or track.

See your Cadillac User Experience Manual.

D. DRIVER INFORMATION CENTER CONTROLS

Left/Right

Press to move between the display zones.

Up/Down

Press to scroll up or down through a menu.

SEL Select

Press to select a highlighted menu item or clear a message.

See Instruments and Controls in your Owner's Manual.

E. LANE KEEP ASSIST

On/Off

See Driving and Operating in your Owner Manual.

F. HEATED STEERING WHEEL

On/Off

See Instruments and Controls in your Owner Manual.

DRIVER INFORMATION CENTER



The Driver Information Center (DIC) on the instrument cluster displays a variety of vehicle information.

DIC MENUS

Use the controls on the right side of the steering wheel to view the DIC menus.

Info – display trip and fuel information

Audio – browse music and change the audio source

Navigation ♦ – view active route and change prompts

Phone – view active call and scroll through contacts

Options – change display information

SELECT INFO PAGES

1. Use the controls to open the Options menu.
2. Scroll to Info Page Options. Press the **SEL** button to enter the menu.
3. Press the **^** or **v** button to scroll through the list of items.
4. Press the **SEL** button to select or deselect an item to display on the Info menu.

See Instruments and Controls in your Owner's Manual.

MULTI-COLOR HEAD-UP DISPLAY ♦



The Head-Up Display (HUD) projects some operating information on the windshield. Temporary information, such as audio changes and navigation ♦ maneuvers, also may be displayed. The HUD controls are located on the left side of the instrument panel.

HUD HUD

Lift up or press down to adjust the position of the image. It cannot be adjusted side-to-side.

INFO

Press to select from four displays: Speed View; Audio/Phone View; Navigation View; and Performance View.

± Brightness

Lift up or press down to brighten or dim the display. Hold down to turn off the display.

ROTATION OPTION


- ▶ To adjust the angle of the HUD, use the DIC controls to view Options > Head-Up Display and select Adjust Rotation. Press the **^** or **v** button to adjust the angle. Select OK to save the setting.

See Instruments and Controls in your Owner's Manual.

CADILLAC USER EXPERIENCE CONTROLS

Refer to your Owner's Manual for important information about using the infotainment system while driving.

Your XT5 offers a variety of entertainment, communication and vehicle system options. Touch an application icon on the touch screen or use the rotary controller and buttons to access an item. You can use simple gestures on the touch screen, such as tap, drag, pinch and spread, to interact with the infotainment system. Link a compatible smartphone, USB flash drive or portable audio player/iPod® to the infotainment system using a Bluetooth or USB connection. For assistance, call 1-855-428-3669 or visit my.cadillac.com/learn.

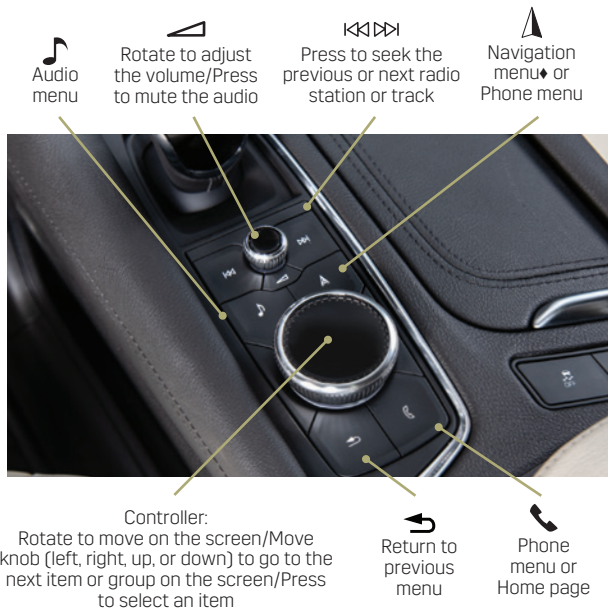

See your Cadillac User Experience Manual.

CADILLAC USER EXPERIENCE FEATURES

STORING STATION FAVORITES

Radio stations from all bands (AM, FM or SiriusXM♦) can be stored in any order.



1. Display the desired radio station.
2. Touch and hold a favorite screen button. Favorites also can be saved by touching the ★ in a station or channel list.
3. Repeat the steps to store another favorite item.

SIRIUSXM® WITH 360L♦

SiriusXM with 360L provides subscribers an enhanced in-vehicle listening experience with unique satellite and streaming channels, on-demand content, personalized recommendations and an interactive interface. For the full SiriusXM with 360L experience, OnStar Connected Access is required. Learn more about OnStar services at onstar.com.

APPLE CARPLAY



Apple CarPlay capability is available through a compatible smartphone using the Apple CarPlay icon on the Home page of the infotainment system. No app is required.

1. Connect your compatible phone by plugging the Lightning cable into a USB data port. Use your device's factory-provided Lightning cable. Aftermarket cables may not work.
 2. The Apple CarPlay icon will illuminate. Touch the icon to have your apps displayed.
- ▶ Press the  Home button to exit Apple CarPlay. To return to the last page viewed in Apple CarPlay, press and hold the  Home button.
 - ▶ To change the Apple CarPlay settings, go to Settings > Apps > Apple CarPlay.

♦ Optional equipment

ANDROID AUTO

Android Auto capability is available through a compatible smartphone using the Android Auto icon on the Home page of the infotainment system.

1. Download the Android Auto app to your phone from the Google Play Store.
 2. Connect your compatible phone by plugging the phone USB cable into a USB data port. Use your device's factory-provided USB cable. Aftermarket cables may not work.
 3. The Android Auto icon will illuminate. Touch the icon to have your apps displayed.
- ▶ Press the  Home button to exit Android Auto. To return to the last page viewed in Android Auto, press and hold the  Home button.
 - ▶ To change the Android Auto settings, go to Settings > Apps > Android Auto.

PORTABLE AUDIO DEVICES

USB ports for data and charging are located in the center console storage compartment.

- ▶ Connect an iPod®, iPhone®, MP3 player, a USB flash drive or a USB mass storage device to the USB port.
- ▶ Touch Audio, and then touch More, if necessary, to select the USB device.



See your Cadillac User Experience Manual.

CADILLAC USER EXPERIENCE FEATURES

APPS

Connected apps linking to music, news, weather, travel information, sports, entertainment and more are available for download to the infotainment system through the Apps icon. Downloading and using the apps requires internet connectivity, and may require a data plan, accessed through the vehicle's 4G LTE Wi-Fi hotspot, if active, or a mobile device hotspot. For more information, visit my.cadillac.com/learn.

VOICE RECOGNITION

Control the music source, enter a navigation destination, make phone calls hands-free, and perform other tasks using the natural voice recognition system.



1. Press the **Press to Talk** button on the steering wheel.
2. The system will play a prompt followed by a beep.
3. After the beep, say what you want it to do.
 - Examples: "Call Dave" or "Tune to 99.5 FM"
 - Say "Help" for voice recognition assistance

BLUETOOTH VOICE RECOGNITION

Bluetooth Voice Recognition allows access to the voice recognition commands on a compatible, paired cell phone; e.g. Siri® Eyes Free or Voice Command.

- ▶ To activate Bluetooth Voice Recognition, press and hold the **Press to Talk** button.

See your Cadillac User Experience Manual.

BLUETOOTH® SYSTEM

Refer to your Owner's Manual for important information about using the Bluetooth system while driving.

To use a Bluetooth-enabled device, it must be paired with the in-vehicle Bluetooth system. Not all devices will support all functions. The pairing process is disabled when the vehicle is moving. For more information, visit my.cadillac.com/learn.

PAIR A PHONE

1. To use voice recognition, press the **Press to Talk** button; after the tone, say "Pair Phone." To use the infotainment screen, select the Phone icon > Connect Phone > Add Phone.
2. Start the pairing process on your phone. From the Bluetooth settings, select the name shown on the infotainment screen.
3. Follow the pairing instructions.
4. When pairing is complete, the phone screen is displayed.

SECONDARY PHONE

A secondary phone can be paired to the Bluetooth system. The system connects to the phone that is set to First to Connect. The secondary phone can only receive calls.

- ▶ To set the first and secondary phones, go to Settings > System > Phones and select the **Information** icon.

NFC PAIRING

- ▶ To use Near Field Communication (NFC) pairing, hold up your unlocked NFC-compatible smartphone to the NFC icon below the infotainment screen. Check your smartphone owner's information for NFC compatibility.

See your Cadillac User Experience Manual.

WIRELESS CHARGING

The wireless charging system for smartphones is located under the center console armrest. To check mobile device compatibility, visit my.cadillac.com/learn. See your phone retailer for required phone accessories or charging adapters.

1. The vehicle must be on or Retained Accessory Power must be active.
2. Remove all objects from the charging pocket.
3. Place the smartphone face up in the pocket.
4. The ⚡ battery charging symbol will display on the infotainment screen. If not charging, remove the smartphone for 3 seconds, and rotate it 180 degrees, before reinserting it in the charging pocket.



See Instruments and Controls in your Owner's Manual.

4G LTE WI-FI® HOTSPOT

With the vehicle's available built-in 4G LTE Wi-Fi hotspot, up to 7 devices (smartphones, tablets and laptops) can be connected to high-speed internet.

- ▶ To retrieve the SSID and password for the hotspot, select the Wi-Fi Hotspot icon on the infotainment screen or go to Settings > System > Wi-Fi Hotspot.

Note: For more information on use and system limitations, visit my.cadillac.com/learn.

See your Cadillac User Experience Manual.

◆ Optional equipment

VEHICLE CUSTOMIZATION

Many vehicle features can be customized using the Settings menus on the infotainment screen. The Settings menus include System, Apps, and Vehicle.

1. Touch **Settings** on the Home page.
2. Select the desired menu item.
3. Select the desired feature and setting.
4. Touch < Back to exit each menu.



See Instruments and Controls in your Owner's Manual.

UNIVERSAL REMOTE SYSTEM

The Universal Remote System on the overhead console enables your vehicle to control 3 different devices, ranging from garage doors and gates to home lighting. Go to homelink.com for detailed videos and instructions on how to program the Universal Remote System. For additional assistance, call 1-800-355-3515.

See Instruments and Controls in your Owner's Manual.

CLIMATE CONTROLS

FRONT CLIMATE CONTROLS

The climate control settings can be adjusted using the climate control buttons or the infotainment screen.



AUTOMATIC OPERATION

- ▶ Press AUTO. The system automatically controls the fan speed, air delivery, air conditioning and recirculation to reach the set temperature.

 
SYNC TEMPERATURE SETTINGS

- ▶ Touch SYNC on the infotainment climate control screen to link all climate zone settings to the driver's settings.

REAR CLIMATE CONTROLS

The rear climate control settings can be adjusted using the rear climate control buttons or the infotainment screen.

- ▶ To lock/unlock the rear seat controls, select the Rear Climate Controls on the infotainment screen and then touch Rear Control Lockout.



AIR IONIZER

The air ionizer, which removes contaminants such as pollen and dust to help clean the air inside the vehicle, turns on automatically with the climate control system.

- ▶ To turn on or off, go to Settings > Vehicle > Climate and Air Quality > Ionizer.

See Climate Controls in your Owner's Manual.

EXTERIOR LIGHTING



Rotate the control band to activate the exterior lamps.

 **Off/On**




AUTO Automatic Headlamp System

Automatically activates the Daytime Running Lamps (DRLs) or the headlamps and other exterior lamps depending on outside light conditions.

 **Parking Lamps**

 **Headlamps**

 **IntelliBeam System**

Press the button on the end of the lever with the lamp control in the AUTO or  Headlamps position to turn the automatic high-beam system on or off. A green  indicator displays on the instrument cluster when the system is on; a blue  indicator displays when the high-beam headlamps are on.

Note: IntelliBeam activates the high-beam headlamps only when driving over 25 mph.

See Lighting in your Owner's Manual.

◆ Optional equipment

WINDSHIELD WIPERS



Move the lever up or down to activate the windshield wipers.

HI Fast Wipes

LO Slow Wipes

INT Intermittent Wipes/AUTO Rainsense™ Sensitivity◆

Rotate the band up for more frequent wipes or down for less frequent wipes. To turn Rainsense mode on or off, go to Settings > Vehicle > Comfort and Convenience > Rainsense Wipers.

OFF

1x Single Wipe

 **Washer Fluid**

Pull the lever to spray washer fluid on the windshield.

REAR WIPER

 **REAR OFF-INT-ON**

Turn the end of the lever to activate the rear wiper.

 **Rear Washer Fluid**


Push the lever to spray washer fluid on the rear window and rear camera lens◆.

See Instruments and Controls in your Owner's Manual.

FRONT SEATS

SET FRONT SEAT MEMORY POSITIONS

With the ignition On or in Accessory mode:

1. Adjust the driver's seat, power steering column and power outside mirrors to the desired positions.
 2. Press and release the **SET** button on the driver's door. A beep will sound.
 3. Immediately press and hold button 1 or 2 until two beeps sound. Use the button that matches the Driver Information Center welcome message indicating driver 1 or 2.
- ▶ To store seat and power steering column positions for more clearance when exiting the vehicle, repeat the steps using the  **Exit** button instead of button 1 or 2.



RECALL FRONT SEAT MEMORY POSITIONS

- ▶ Press and hold button 1, 2 or  **Exit** until the set position is reached.

The memory/exit positions can be programmed to be recalled automatically when the ignition is turned on/off (for exit recall, the driver's door must be opened).

- ▶ To set the automatic recall options, go to Settings > Vehicle > Seating Position > Set Entry Memory and Set Exit Memory.

See Seats and Restraints in your Owner's Manual.

REAR SEATS


SLIDE THE REAR SEAT

- ▶ Lift the bar (A) under the seat cushion to slide the seat forward or rearward.



RECLINE THE REAR SEAT

- ▶ To recline the seatback, pull the lever (B) on top of the seatback and move the seatback to the desired position. Release the lever.

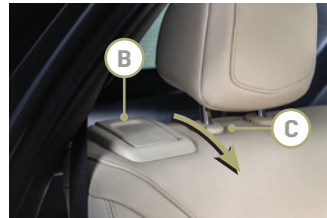

FOLD THE REAR SEATBACK

- ▶ Press the button (C) on the bottom of the head restraint post to lower the head restraint.
- ▶ Pull the lever (B) on top of the seatback and fold the seatback forward.
- ▶ From the cargo area, pull the seat release lever (D) located on either side of the cargo area to fold either seatback.
- ▶ To raise a seatback, lift it up until it locks in place.



See Seats and Restraints in your Owner's Manual.


REAR SEAT REMINDER

A Rear Seat Reminder message may display on the Driver Information Center when the vehicle is turned off. Check the rear seat before exiting the vehicle. The system does not actually detect people or objects in the rear seat; instead, under certain conditions, it detects when a rear door is opened and closed during a trip, indicating that there may be something in the rear seat.




See Seats and Restraints in your Owner's Manual.

ULTRAVIEW SUNROOF

OPEN/CLOSE THE SUNSHADE

- ▶ Press the rear or front of the  Sunshade switch to express-open or express-close the sunshade. Press again to stop movement.

OPEN/CLOSE THE SUNROOF

- ▶ Press the rear of the  Sunroof switch to vent the sunroof. Press again to express-open the sunroof.
- ▶ Press and hold the rear of the  Sunroof switch to open the sunroof to a desired position. The sunroof will stop when the switch is released.
- ▶ Press the front of the  Sunroof switch to express-close the sunroof.





See Keys, Doors and Windows in your Owner's Manual.

◆ Optional equipment

POWER LIFTGATE

OPEN/CLOSE THE POWER LIFTGATE

- ▶ Press the  Power Liftgate button on the Remote Keyless Entry (RKE) transmitter twice.
- ▶ Press the  Power Liftgate knob on the driver's door.
- ▶ Press the touchpad under the liftgate handle to open the liftgate.
- ▶ Press the button next to the liftgate latch to close the liftgate.



PROGRAMMING THE LIFTGATE HEIGHT

1. Turn the Power Liftgate knob to the 3/4 mode position.
2. Open the liftgate. Adjust it manually to the desired height.
3. To save the setting, press and hold the button next to the liftgate latch for 3 seconds. The turn signals flash and beeps sound when the setting is saved.

HANDS-FREE OPERATION

- ▶ To open or close the liftgate hands-free, kick your foot straight under the left side of the rear bumper. The RKE transmitter must be within 3 feet of the liftgate. The vehicle logo is projected on the ground near the rear bumper, indicating the kicking motion location. The logo is shown for 1 minute, depending on operating conditions.



See Keys, Doors and Windows in your Owner's Manual.



DRIVER ASSISTANCE SYSTEMS

Safety or driver assistance features are no substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Read your Owner's Manual for important feature limitations and information.

SAFETY ALERT SEAT – The driver's seat pulses (left, right, or both sides) to alert you of the direction of potential hazards.


- ▶ Audible alerts may be selected instead of seat pulsing alerts. To change the alert settings, go to Settings > Vehicle > Collision/Detection Systems > Alert Type.


FORWARD COLLISION ALERT – The  Vehicle Ahead Indicator is green when a vehicle is detected and is amber when following a vehicle ahead much too closely. When approaching a vehicle directly ahead too rapidly, a red alert flashes on the windshield and the Safety Alert Seat pulses or rapid beeps sound (if selected).

- ▶ Press the  **Collision Alert** button on the steering wheel to set the alert timing to Far, Medium or Near. This is also the Adaptive Cruise Control–Advanced  Follow Distance Gap setting.

FOLLOWING DISTANCE INDICATOR – The following distance to the vehicle ahead is indicated in seconds under the Info menu on the Driver Information Center. If no vehicle is detected ahead, dashes are displayed.




LANE KEEP ASSIST WITH LANE DEPARTURE WARNING – The system may help you avoid collisions due to unintentional lane departures. The  Lane Keep Assist Indicator is green if the system is available to assist. If the vehicle approaches a detected lane marking without using a turn signal in that direction, the system may assist by gently turning the steering wheel and displaying an amber .


If active driver steering is not detected, the amber  may flash and the Safety Alert Seat may pulse or beeps may sound (if selected) on the side of the departure direction as the lane marking is crossed. The Lane Keep Assist system does not continuously steer the vehicle; the driver needs to steer and be in complete control of the vehicle.

- ▶ Press the  **Lane Keep Assist** button on the steering wheel to turn the system on or off.

LANE CHANGE ALERT WITH SIDE BLIND ZONE ALERT

– While driving, the system displays a  warning symbol on the left or right side mirror when a vehicle is detected in that side blind zone area or rapidly approaching that area. The warning symbol flashes if a turn signal is activated when a vehicle has been detected on the same side.

- ▶ To turn the system on or off, go to Settings > Vehicle > Collision/Detection Systems > Lane Change Alert.

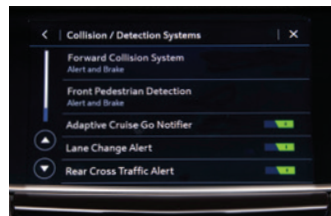

See Driving and Operating in your Owner's Manual.

DRIVER ASSISTANCE SYSTEMS

FRONT PEDESTRIAN BRAKING – During daytime driving, the system detects pedestrians directly ahead up to a distance of approximately 131 ft. and displays an amber pedestrian indicator. When approaching a detected pedestrian too quickly, a red alert flashes on the windshield and the Safety Alert Seat pulses or rapid beeps sound (if selected). The system may prepare the brakes or automatically brake the vehicle, if you have not already done so.

- ▶ To set to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Front Pedestrian Detection.

AUTOMATIC EMERGENCY BRAKING – In detected potential imminent collision situations with vehicles directly ahead, the system can provide alerts and enhance driver braking or apply the brakes, if you have not already done so, to help reduce the severity or help avoid collisions at very low speeds.

- ▶ To set Automatic Emergency Braking and Forward Collision Alert to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Forward Collision System.

REVERSE AUTOMATIC BRAKING – In detected potential imminent collision situations with some objects behind your vehicle while in Reverse, the system can provide alerts and hard emergency braking, if you have not already done so, to help reduce the severity or help avoid collisions at very low speeds.

- ▶ Press the **P** **Park Assist** button (A) on the center of the instrument panel to turn Reverse Automatic Braking, Rear Cross Traffic Alert, and Park Assist on or off.



FRONT AND REAR PARK ASSIST – During low-speed parking maneuvers, the system provides “distance to closest object” information on the Driver Information Center and the Safety Alert Seat pulses or a beep sounds (if selected). When an object is very close, the Safety Alert Seat pulses or 5 beeps sound (if selected).

- ▶ Press the **P** **Park Assist** button (A) on the center of the instrument panel to turn the system on or off.

REAR CROSS TRAFFIC ALERT – When in Reverse, the system warns of cross traffic approaching in either direction by displaying a red alert on the infotainment screen and the left or right side of the Safety Alert Seat pulses or beeps sound (if selected).

- ▶ To turn the system on or off, go to Settings > Vehicle > Collision/Detection Systems > Rear Cross Traffic Alert.

HD REAR VISION CAMERA – When the vehicle is in Reverse below 8 mph, a view of the area behind or in front of the vehicle displays on the infotainment screen.

HD SURROUND VISION – The Surround Vision system displays the area surrounding the vehicle along with front and rear camera views on the infotainment screen. The system operates when the vehicle is in Reverse or Drive while moving less than 8 mph. Camera view buttons (B) are at the bottom of the screen.

See Driving and Operating in your Owner's Manual.

DRIVER ASSISTANCE SYSTEMS

AUTOMATIC PARKING ASSIST WITH BRAKING – The Automatic Parking Assist with Braking system steers the vehicle and applies the brakes at idle speed to help you park the vehicle while you follow commands and control the gear selection.

1. While driving below 18 mph, press the **P** Parking Assist with Braking button (A) on the center of the instrument panel. A parking assist display is shown on the infotainment screen. The system will begin searching for a large enough parking space.
2. To switch between parallel and perpendicular parking, touch the Parking Type screen button. To search for a parking spot to the right or left, touch the Parking Side screen button.
3. Once a space is found, shift the vehicle into Reverse or Drive as directed and follow the instructions on the infotainment screen. The vehicle automatically steers and brakes, moving at idle speed into a detected parking space. The driver must follow the instructions, select gears, and override braking and acceleration as needed. Parking Complete will be displayed and a beep will sound when the parking maneuver is complete.

TRACTION CONTROL – The traction control system limits wheel-spin in difficult driving conditions. The system turns on automatically every time the vehicle is started. Turn off traction control if the vehicle is stuck and rocking the vehicle is required.

- ▶ Press the **Traction Control** button on the center console to turn traction control off or on again.

See Driving and Operating in your Owner's Manual.

REAR CAMERA MIRROR

– The rear camera mirror provides a wider, less obstructed field of view to assist when driving, changing lanes and checking traffic conditions.

A. On/Off

Pull or push the lever at the bottom of the mirror to turn the video display on or off.

B. Selection Control

Press and release the button to select the brightness, zoom or tilt feature.

C. + / – Adjustment

Press and release either button to adjust the selected feature.

See Keys, Doors and Windows in your Owner's Manual.



CARGO MANAGEMENT SYSTEM

The cargo management system features a rail system and cargo fence that divides the cargo area for smaller items. The fence stows under the cargo floor when not in use.

ADJUST THE FENCE POSITION

1. Turn each knob on the fence posts to align the Unlock symbol with the button arrow.
2. Press the button and then slide the fence to the desired position along each rail until it clicks into place.
3. Turn each knob to the Lock position.



REMOVE THE FENCE

1. Turn each knob on the fence posts to align the Unlock symbol with the button arrow.
2. Press the buttons on the rail sliders and pull up the fence posts to remove the fence. Store the fence under the cargo floor at the front of the compartment. Secure it with the straps.
3. Move the rail sliders to the open slot on the rail to remove the sliders. Store the sliders under the cargo floor.



See Storage in your Owner's Manual.


CENTER CONSOLE STORAGE AREA

A storage area is located under the front of the center console for use by front seat passengers. The storage area features an accessory power outlet for electrical equipment.



See Instruments and Controls in your Owner's Manual.

TIRE PRESSURE MONITOR

The  **Low Tire Pressure** warning light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated. Fill the tires to the proper tire pressures listed on the Tire and Loading Information label, located below the driver's door latch. Current tire pressures can be viewed on the Driver Information Center.

With the ignition on or in Accessory mode, the Tire Fill Alert will provide visual and audible alerts when inflating a tire.

See Vehicle Care in your Owner's Manual.

OWNER PRIVILEGES™

ROADSIDE ASSISTANCE

1-800-224-1400

TTY Users: 1-888-889-2438

Roadside Assistance provides every Cadillac owner with the advantage of contacting a Cadillac advisor and, when appropriate, a Cadillac-trained dealer technician who can provide on-site services, including towing service, battery jump-starting, lock-out service, fuel delivery and flat tire assistance. Services are provided for up to 6 years/70,000 miles, whichever occurs first.

OnStar® Roadside Assistance

If you have a current OnStar Safety & Security plan, press the blue **OnStar** button or red **Emergency** button to get the help you need. An OnStar advisor will use GPS technology to pinpoint your vehicle location and contact the nearest service provider.

To learn more about OnStar services, press the blue **OnStar** button, visit onstar.com, call 1-888-4-ONSTAR (1-888-466-7827), or refer to your Owner's Manual.

CUSTOMER ASSISTANCE

1-800-458-8006

Cadillac Customer Assistance is available anytime to answer questions or provide additional information.

myCADILLAC MOBILE APP

Download the myCadillac app to your compatible smartphone (or device) and, if your vehicle is properly equipped, you can start or turn off your engine, lock or unlock your doors, view key diagnostic information, set parking information and more.

The app is available on select Apple and Android devices. Service availability, features and functionality vary by vehicle, device and data plan. Device data connection required. Visit onstar.com for more details. Download the mobile app from your compatible mobile device's app store.

CADILLAC ONLINE OWNER CENTER

Create an account at my.cadillac.com to access personalized information, including an online Owner's Manual and helpful how-to videos, track your service history and warranty status, manage your OnStar and Connected Services vehicle plans, review your current Vehicle Diagnostics report (active service account required) and more.

We recommend always using ACDelco or genuine GM service parts.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2019 by General Motors. All rights reserved.

